

# **R** **RAMSOND®** + *Céliera®*

• DUCTLESS MINI SPLIT AIR CONDITIONER + HEAT PUMP •

## **COMPLETE SERVICE MANUAL**

---



---

## RAMSOND CORPORATION

### MODELS:

AS-09TR3SVDDH	AS-09UR3SVDDH	AS-12TR3SVEDH
AS-12UR3SVEDH	AS-18TR3SXADH	AS-18UR3SXADH
AS-24TR3SBBDH	AS-24UR3SBBDH	AS-09TR3SVEDC
AS-09UR3SVEDC	AS-12TR3SXEDC	AS-12UR3SXEDC
AS-18TR3SBBDC	AS-18UR3SBBDC	AS-24TR3SDBDC
AS-24UR3SDBDC	AS-30UR3SDKVT	AS-36UR3SDKVT

## *Celiera Systems Inc.*

### MODELS:

AS-09TR3SVDDH	AS-09UR3SVDDH	AS-12TR3SVEDH
AS-12UR3SVEDH	AS-18TR3SXADH	AS-18UR3SXADH
AS-24TR3SBBDH	AS-24UR3SBBDH	AS-09TR3SVEDC
AS-09UR3SVEDC	AS-12TR3SXEDC	AS-12UR3SXEDC
AS-18TR3SBBDC	AS-18UR3SBBDC	AS-24TR3SDBDC
AS-24UR3SDBDC	AS-30UR3SDKVT	AS-36UR3SDKVT

---

# Contents

## Table of Contents

<b>1. Safety Considerations</b> .....	4-5
<b>2. Product Specifications</b> .....	6-18
<b>3. Product Pictures and Dimensions</b> .....	19-22
3-1.1 Indoor Unit Pictures .....	19
3-1.2 Outdoor Unit Pictures .....	20
3-1.3 Remote Picture .....	20
3-2.1 Product Dimensions - Indoor .....	21
3-2.2 Product Dimensions - Outdoor .....	22
<b>4. Installation Instructions</b> .....	23
4-1.1 Installation Place and Condition - Indoor .....	23
4-1.2 Installation Place and Condition - Outdoor .....	24
4-2.1 Electric Wiring Diagram .....	25
4-2.2 Indoor Board Diagrams .....	25-26
4-2.3 Outdoor Board Diagrams .....	27
4-3. Refrigerant Flow System .....	28
4-4. Air Purging and Leakage Test .....	29
4-5. Test Running .....	26
4-5.1 Check After Installation .....	31
4-5.2 Operation Test .....	31
<b>5. Function Operation</b> .....	31
5-1. Operation Range (cooling and heating ) .....	31
5-2.1 Operation Instructions .....	31
5-2.2 Function Instructions .....	32-37
5-2.2A General Technical Parameters .....	32
5-2.2B Control Functions .....	32-37
<b>6. Electrical Characteristics</b> .....	38
6-1. Print Circuit Board (Indoor & Outdoor) .....	38-41
6-2. Fan Motor .....	42-43
6-2.1 Diagrams .....	42
6-2.2 Indoor DC Fan Motor .....	43
6-2.3 Outdoor DC Fan Motor .....	43
6-3. Temperature Sensor .....	44-46
6-4. Compressor .....	47
6-5. Electric Reactor .....	47
<b>7. Troubleshooting</b> .....	48
7-1. Error Code Tables .....	48-54
7-1.1 Indications on the Outdoor Unit .....	48-51
7-1.2 Indications on the Indoor Unit .....	51-54
7-2. Test the jumper terminals .....	55
7-3. Automatic Protection System Diagnosis and Troubleshooting .....	55
7-3.1 Voltage Protection .....	55
7-3.2 Current Protection .....	55-56
7-3.3 Frequency Increase Lockout - Compressor .....	56
7-3.4 Anti-Overload Lockout - Outdoor Coil .....	56
7-4. Troubleshooting Diagnosis for Compressor .....	56
7-5. Trouble Diagnosis for Electric Filter Board .....	56
7-6. Trouble Diagnosis for Electric Communication Issues .....	56

# 1. Safety Considerations

## **IMPORTANT!** **Please Read Before Starting**

This air conditioning system meets strict safety and operating standards. As the installer or service person, your goal should be to install or service the system so that it operates safely and efficiently.

### **For safe installation and trouble-free operation, you should:**

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- Observe all local, state, and national electrical codes.
- Pay close attention to all warnings and caution notices given in this manual.



**WARNING**

This symbol indicates a hazard or unsafe practice which can result in **severe personal injury or death**.



**CAUTION**

This symbol indicates a hazard or unsafe practice which can result in **personal injury, product, or property damage**.

### ***If Necessary, Get Help:***

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

### ***In Case of Improper Installation:***

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

## **• SPECIAL PRECAUTIONS •**



**WARNING**

### **› When Wiring:**

**ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.**

- Do not supply power to the unit until all wiring and tubing are completed, reconnected, and/or checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to all wiring diagrams and these instructions when wiring. Improper connections and inadequate grounding can cause accidental injury or death.
- Ground the unit following local electrical codes.
- Connect all wiring securely. Loose wiring may cause overheating at connections and become a possible fire hazard.

---

### › **When Transporting:**

Be careful when picking up and moving indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Watch for sharp edges or thin aluminum fins, as they can cut your fingers.

### › **When Installing:**

#### • **In a Ceiling or Wall**

Make sure the ceiling/wall is strong enough to hold the unit's weight. It may be necessary to reinforce it using a strong wood or metal frame to provide added support.

#### • **In a Room**

Properly insulate any tubing run inside a room to prevent "sweating" - condensation that can collect and drip, leading to possible water damage to walls and floors.

#### • **In Moist or Uneven Locations**

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and unwanted vibration.

#### • **In an Area with High Winds**

Securely anchor the outdoor unit down with bolts and additional framing (not supplied). Provide a suitable air baffle.

#### • **In a Snowy Area (for Heat Pump-type Systems)**

Install the outdoor unit on a raised platform that will be higher than drifting snow. Provide snow vents.

### › **When Connecting Refrigerant Tubing:**

△ Use flare method for connecting tubing.

△ Apply refrigerant lubricant to matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for leak-free connection.

△ Check carefully for leaks before starting a test run.

### › **When Servicing:**

△ Turn the power OFF at the main power box (mains) before opening the unit to check or repair electrical parts and wiring.

△ Keep your fingers and clothing away from any moving parts.

△ Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit being serviced.



### › **Others:**

△ Ventilate any enclosed areas when installing or testing the refrigeration system. Escaped refrigerant gas - on contact with fire or heat - can produce dangerously toxic gas.

△ Confirm upon completing installation that no refrigerant gas is leaking. As stated above, if escaped gas comes in contact with a stove, gas water heater, electric room heater or other heat source, it can produce dangerously toxic gas.

### **NOTE:**

*The figure, size, and parameters of the actual product may not be identical with the service manual; please take actual product as the standard where applicable.*

## 2. Product Specifications

Model No.		AS-09UR3SVDDH	AS-12UR3SVEDH	AS-18UR3SXADH	AS-24UR3SBBDH
Type		T1, INVERTER	T1, INVERTER	T1, INVERTER	T1, INVERTER
Performance					
Cooling Capacity	Btu/h	9,000	12,000	18,000	24,000
Heating Capacity	Btu/h	10,000	13,000	20,000	24,500
Rated Input-Cooling	W	820	1120	1700	2290
Rated Input-Heating	W	860	1110	2000	2280
SEER	Cooling	16.3	16.7	17.6	17.6
HSPF	Heating	9.1	9.0	10.1	9.8
EER for Cooling	Btu/W	10.98	10.71	10.59	10.48
COP for Heating	Btu/W	11.63	11.71	10.00	10.75
Moisture Removal	L/H.r	0.9	1.2	2.0	2.4
Air Circulation	m3/h	550	620	1000	1150
Refrigerant		R410A	R410A	R410A	R410A
Refrigerant charge volume	g	830	1000	1400	1630
Indoor Sound Pressure(H/M/L/silence)	dB (A)	39/36/33/26	40/36/33/26	45/43/38/35	48/45/40/36
Outdoor Sound pressure	dB (A)	54	54	56	58
Voltage, Frequency, Phase	V	230V~,208V~,60Hz,1P			
Rated Current	Cooling (A)	3.7	5.0	7.6	10.5
	Heating (A)	3.9	5.0	9.0	10.4
System					
Compressor type		Rotary	Rotary	Rotary	Rotary
Compressor MFG		GMCC	GMCC	GMCC	GMCC
Compressor Model #		ASK89D53UEZ1	ASN108D32UFZ	ATM150D43UFZ	ATF235D22UMT
Expansion Device		Capillary	Capillary	Capillary	Capillary
Indoor DC motor		No	No	No	Yes
Indoor motor power output	W	14	14	35	35
Indoor motor speed	S/H/M/L/Mutter	1250/1100/950	1250/1100/950	1150/990/830	1100/960/800
Outdoor DC motor		No	No	No	No
Outdoor motor power output	W	28	28	41	61
Indoor motor speed	H/M/L	850	880	910	840
Evaporator					
Evaporator material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Evaporator length x height x width	mm	550x 294x27.2	620x294x27.2	705x378x27.2	842x378x27.2
Tube pitch(a)x row pitch(b)	mm	21x13.6	21x13.6	21x13.6	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Condenser					
Condenser material		Copper tube and Aluminum Fin			
Number of rows		1	1.5	2	2

Tube outside dia.and type	mm	φ7 innergroove tube	φ7 innergroove tube	φ7 innergroove tube	φ7 innergroove tube
f.Condensor length x height x width	mm	695x462x36.4	( 695+400 ) x462x36.4	(842+813)x546x36.4	842x378x27.2
Tube pitch(a)x row pitch(b)	mm	21x18.19	21x18.19	21x18.19	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Connecting Pipe Diameter					
Liquid Pipe	inch	1/4	1/4	1/4	3/8
Gas Pipe	inch	3/8	3/8	1/2	5/8
Others					
Net Dimensions WxHxD	Indoor Unit mm	745x270x214	815x270x214	915x315x236	1085x315x236
	Indoor Unit in	29 5/16x10 5/8x8 7/16	32 1/16x10 5/8x8 7/16	36x12 3/8x9 5/16	42 3/4x12 3/8x9 5/16
	Outdoor Unit mm	715x482x240	715x482x240	810x585x280	860x650x310
	Outdoor Unit in	28 1/8x19x9 7/16	28 1/8x19x9 7/16	31 7/8x23x11	33 7/8x25 9/16x12 3/16
Net Weight (Kg)	Indoor Unit	8.5	9.0	12.5	15
	Outdoor Unit	25	27.0	39	50
Packing Dimensions WxHxD	Indoor Unit mm	800x335x265	870x335x265	1000x390x315	1170x390x315
	Indoor Unit in	31 1/2x13 3/16x10 7/16	34 1/4x13 3/16x10 7/16	39 3/8x15 3/8x12 3/8	46 1/16x15 3/8x12 7/16
	Outdoor Unit mm	830x530x340	830x530x340	940x640x385	995x730x445
	Outdoor Unit in	32 11/16x20 7/8x13 3/8	32 11/16x20 7/8x13 3/8	37x25 3/16x15 3/16	39 3/16x28 3/4x17 1/2
Gross Weight (Kg)	Indoor Unit	10	11.0	14.5	17.0
	Outdoor Unit	27	30	42	54.0
Loading Capacity NO pipe(40'HC )		345	335	195	145
Test Standard		ARI 210-240	ARI 210-240	ARI 210-240	ARI 210-240
Approvals		ETL/AHRI	ETL/AHRI	ETL/AHRI	ETL/AHRI
Features					
LED Display on Front Panel		Yes	Yes	Yes	Yes
LED Dimmer		Yes	Yes	Yes	Yes
7 Indoor Fan Speed		Yes	Yes	Yes	Yes
LCD Wireless Remote Controller		Yes	Yes	Yes	Yes
"I feel" in remote controller		Yes	Yes	Yes	Yes
Back lighting remote controller		Yes	Yes	Yes	Yes
-15°C (5°F) Heating		Yes	Yes	Yes	Yes
-15°C (5°F) Cooling		No	No	No	No
Working Temperature Range - Cooling (°C/°F)		0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)
Working Temperature Range - Heating (°C/°F)		-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)
Remote Control Adjustable Temperature Range - Cooling		16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
Remote Control Adjustable Temperature Range -		16°C-30°C;	16°C-30°C;	16°C-30°C;	16°C-30°C;

Heating	(61°F -86°F)	(61°F -86°F)	(61°F -86°F)	(61°F -86°F)
8°C (46°F) Heating to avoid freezing water pipe in Kitchen	Yes	Yes	Yes	Yes
°C & °F convertible	Yes	Yes	Yes	Yes
2 Ways Draining Connection (Left or Right)	Yes	Yes	Yes	Yes
Compressor Intelligent Pre-heating	Yes	Yes	Yes	Yes
Smart Function	Yes	Yes	Yes	Yes
Super Function	Yes	Yes	Yes	Yes
Auto Restart	Yes	Yes	Yes	Yes
Auto Defrost	Yes	Yes	Yes	Yes
Auto Cleaning	Yes	Yes	Yes	Yes
Quiet Mode	Yes	Yes	Yes	Yes
24 Hours Timer	Yes	Yes	Yes	Yes
Removable and washable Panel	Yes	Yes	Yes	Yes
Louver Position Memory	Yes	Yes	Yes	Yes
Washable High Definition Filter	Yes	Yes	Yes	Yes
Horizontal Auto Swing Louver	Yes	Yes	Yes	Yes
Chassis Electric heater function	Yes	Yes	Yes	Yes
Healthy Filter(catechins,VC,HEPA,jasmine aroma filter)	Optional	Optional	Optional	Optional
Wired control	Optional	Optional	Optional	Optional

Model No.		AS-09TR3SVDDH	AS-12TR3SVEDH	AS-18TR3SXADH	AS-24TR3SBDH
Type		T1, INVERTER	T1, INVERTER	T1, INVERTER	T1, INVERTER
Performance					
Cooling Capacity	Btu/h	9000	12000	18000	24000
Heating Capacity	Btu/h	/	/	/	/
Rated Input-Cooling	W	820	1079	1700	2290
Rated Input-Heating	W	/	/	/	/
SEER	Cooling	16.5	16.9	18.3	17.2
HSPF	Heating	/	/	/	/
EER for Cooling	Btu/W	10.98	11.12	10.59	10.48
COP for Heating	Btu/W	/	/		/
Moisture Removal	L/H.r	0.9	1.2	2.0	2.4
Air Circulation	m3/h	550	620	1000	1150
Refrigerant		R410A	R410A	R410A	R410A
Refrigerant charge volume	g	640	930	1350	1600
Indoor Sound Pressure(H/M/L/silence)	dB (A)	39/36/33/26	40/36/33/26	45/43/38/35	48/45/40/36
Outdoor Sound pressure	dB (A)	53	54	56	58
Voltage, Frequency, Phase	V	230V~,208V~,60Hz,1P			
Rated Current	Cooling (A)	3.7	4.9	7.6	10.5
	Heating (A)	/	/	/	/
System					
Compressor type		Rotary	Rotary	Rotary	Rotary
Compressor MFG		GMCC	GMCC	GMCC	GMCC



Compressor Model #		ASK89D53UEZ1	ASN108D32UFZ	ATM150D43UFZ	ATF235D22UMT
Expansion Device		Capillary	Capillary	Capillary	Capillary
Indoor DC motor		No	No	No	Yes
Indoor motor power output	W	14	14	35	35
Indoor motor speed	S/H/M/L/Mutter	1250/1100/950	1250/1100/950	1150/990/830	1100/960/800
Outdoor DC motor		No	No	No	No
Outdoor motor power output	W	28	28	41	61
Indoor motor speed	H/M/L	850	880	910	840
Evaporator					
Evaporator material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Evaporator length x height x width	mm	550x 294x27.2	620x294x27.2	705x378x27.2	842x378x27.2
Tube pitch(a)x row pitch(b)	mm	21x13.6	21x13.6	21x13.6	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Condenser					
Condenser material		Copper tube and Aluminum Fin			
Number of rows		1	1.5	2	2
Tube outside dia.and type	mm	φ7 innergroove tube	φ7 innergroove tube	φ7 innergroove tube	φ7 innergroove tube
f.Condensor length x height x width	mm	695x462x36.4	(695+400) x462x36.4	(842+813)x546x36.4	842x378x27.2
Tube pitch(a)x row pitch(b)	mm	21x18.19	21x18.19	21x18.19	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Connecting Pipe Diameter					
Liquid Pipe	inch	1/4	1/4	1/4	3/8
Gas Pipe	inch	3/8	3/8	1/2	5/8
Others					
Net Dimensions WxHxD	Indoor Unit mm	745x270x214	815x270x214	915x315x236	1085x315x236
	Indoor Unit in	29 5/16x10 5/8x8 7/16	32 1/16x10 5/8x8 7/16	36x12 3/8x9 5/16	42 3/4x12 3/8x9 5/16
	Outdoor Unit mm	715x482x240	715x482x240	810x585x280	860x650x310
	Outdoor Unit in	28 5/32x19x9 7/16	28 5/32x19x9 7/16	31 7/8x23x11	33 7/8x25 9/16x12 3/16
Net Weight (Kg)	Indoor Unit	8.5	9.0	12.5	14.5
	Outdoor Unit	24	26.5	38	48.0
Packing Dimensions WxHxD	Indoor Unit mm	800x335x265	870x335x265	1000x390x315	1170x390x315
	Indoor Unit in	31 1/2x13 3/16x10 7/16	34 1/4x13 3/16x10 7/16	39 3/8x15 3/8x12 3/8	46 1/16x15 3/8x12 7/16
	Outdoor Unit mm	830x530x340	830x530x340	940x640x385	995x730x445
	Outdoor Unit in	32 11/16x20 7/8x13 3/8	32 11/16x20 7/8x13 3/8	37x25 3/16x15 3/16	39 3/16x28 3/4x17 1/2
Gross Weight (Kg)	Indoor Unit	10	11.0	14.5	17.0
	Outdoor Unit	26	29	41	52.0

Loading Capacity NO pipe(40'HC )	345	335	195	145
Test Standard	ARI 210-240	ARI 210-240	ARI 210-240	ARI 210-240
Approvals	ETL/AHRI	ETL/AHRI	ETL/AHRI	ETL/AHRI
Features				
LED Display on Front Panel	Yes	Yes	Yes	Yes
LED Dimmer	Yes	Yes	Yes	Yes
7 Indoor Fan Speed	Yes	Yes	Yes	Yes
LCD Wireless Remote Controller	Yes	Yes	Yes	Yes
"I feel" in remote controller	Yes	Yes	Yes	Yes
Back lighting remote controller	Yes	Yes	Yes	Yes
-15°C (5°F) Heating	No	No	No	No
-15°C (5°F) Cooling	No	No	No	No
Working Temperature Range - Cooling (°C/°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)
Working Temperature Range - Heating (°C/°F)	No	No	No	No
Remote Control Adjustable Temperature Range - Cooling	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
Remote Control Adjustable Temperature Range - Heating	No	No	No	No
8°C (46°F) Heating to avoid freezing water pipe in Kitchen	No	No	No	No
°C & °F convertible	Yes	Yes	Yes	Yes
2 Ways Draining Connection (Left or Right)	Yes	Yes	Yes	Yes
Compressor Intelligent Pre-heating	No	No	No	No
Smart Function	Yes	Yes	Yes	Yes
Super Function	Yes	Yes	Yes	Yes
Auto Restart	Yes	Yes	Yes	Yes
Auto Defrost	Yes	Yes	Yes	Yes
Auto Cleaning	Yes	Yes	Yes	Yes
Quiet Mode	Yes	Yes	Yes	Yes
24 Hours Timer	Yes	Yes	Yes	Yes
Removable and washable Panel	Yes	Yes	Yes	Yes
Louver Position Memory	Yes	Yes	Yes	Yes
Washable High Definition Filter	Yes	Yes	Yes	Yes
Horizontal Auto Swing Louver	Yes	Yes	Yes	Yes
Chassis Electric heater function	No	No	No	No
Healthy Filter(catechins,VC,HEPA,jasmine aroma filter)	Optional	Optional	Optional	Optional
Wired control	Optional	Optional	Optional	Optional

Model No.		AS-09UR3SVEDC	AS-12UR3SXEDC	AS-18UR3SBBDC	AS-24UR3SDBDC
Type		T1, INVERTER	T1, INVERTER	T1, INVERTER	T1, INVERTER
Performance					
Cooling Capacity	Btu/h	9000	12000	18000	24000
Heating Capacity	Btu/h	9500	13000	19000	24500

Rated Input-Cooling	W	670	920	1385	2035
Rated Input-Heating	W	730	1130	1595	2080
SEER	Cooling	21.5	20.5	23.3	20.5
HSPF	Heating	10.5	10.8	11.6	11.8
EER for Cooling	Btu/W	13.43	13.04	13.00	11.73
COP for Heating	Btu/W	13.01	11.50	11.90	11.78
E-STAR_V5.0	ASHP: SEER>15, EER>12.5, HSPF>8.5 CAC: SEER>15, EER>12.5	Yes	Yes	Yes	No
Most Efficient 2016	ASHP: SEER>20, EER>12.5, HSPF>10 CAC: SEER>20, EER>12.5	Yes	Yes	Yes	No
CEE Qualifying Tier	Tier0 - 14.5SEER, 12EER, (8.5HSPF) Tier1 - 15SEER, 12.5EER, (8.5HSPF) Tier2 - 16SEER, 13EER, (9HSPF) Tier3 - 18SEER,13EER, (10HSPF)	Tier3	Tier3	Tier3	No
Moisture Removal	L/H.r	0.9	1.2	1.5	2.4
Air Circulation	m3/h	580	620	1100	1200
Refrigerant		R410A	R410A	R410A	R410A
Refrigerant charge volume	g	950	1160	1550	1880
Indoor Sound Pressure(H/M/L/silence)	dB (A)	38/32/29/26	39/32/29/26	45/41/37/34	48/45/40/36
Outdoor Sound pressure	dB (A)	53	53	55	58
Voltage, Frequency, Phase	V	230V~,208V~,60Hz,1P			
Rated Current	Cooling (A)	3.1	4.1	6.3	9.2
	Heating (A)	3.3	5.0	7.2	9.3
System					
Compressor type		Rotary	Rotary	Rotary	Rotary
Compressor MFG		Hitachi	GMCC	GMCC	GMCC
Compressor model #		ASD088RKQA6JT6	ASN108D32UFZ	ATM150D43UFZ	ATF235D22UMT
Expansion Device		capillary	capillary	capillary	capillary
Indoor DC motor		No	No	Yes	Yes
Indoor motor power output	W	14	14	35	35
Indoor motor speed	S/H/M/L	1250/1100/9500	1250/1100/9500	1100/960/800	1200/1040/880
Outdoor DC motor		Yes	Yes	Yes	Yes
Outdoor motor power input	W	30	30	60	61
Outdoor motor speed	H/M/L	880/650/450	800/650/450	840/650/500	1200/550/500
Evaporator					
Evaporator material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2

Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Evaporator length x height x width	mm	620x294x27.2	620x294x27.2	842x378x27.2	842x336x272
Tube pitch(a)x row pitch(b)	mm	21x13.6	21x13.6	21x13.6	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Condenser					
Condenser material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Condenser length x height x width	mm	(684+655)X462x36.4	842x546x18.19 +813x546x18.19	895x630x18.2 867x630x18.2	842x27.2x378
Tube pitch(a)x row pitch(b)	mm	21x18.19	21x18.19	21x18.19	21x18.19
Fin spacing	mm	1.4	1.4	1.6	1.5
Connecting Pipe Diameter					
Liquid Pipe	inch	1/4	1/4	1/4	3/8
Gas Pipe	inch	3/8	3/8	1/2	5/8
Others					
Net Dimensions WxHxD (mm)	Indoor Unit mm	870x270x214	870x270x214	1148x315x236	1148x315x236
	Indoor Unit in	34 1/4x11x8 11/16	34 1/4x11x8 11/16	45 3/16x12 13/16x9 5/8	45 3/16x12 13/16x9 5/8
	Outdoor Unit mm	715x482x240	810x585x280	860x650x310	885x795x366
	Outdoor Unit in	28 1/8x19x9 7/16	31 7/8x23x11	33 7/8x25 9/16x12 3/16	34 7/8x31 5/16x14 3/8
Net Weight (Kg)	Indoor Unit	8.5	9.0	14.5	14.5
	Outdoor Unit	27.0	33.0	45	56
Packing Dimensions WxHxD (mm)(With pipe)	Indoor Unit mm	900x335x260	900x335x260	1210x390x315	1210x390x315
	Indoor Unit in	35 7/16x13 3/16x10 7/16	35 7/16x13 3/16x10 7/16	47 5/8x15 3/8x12 7/16	47 5/8x15 3/8x12 7/16
	Outdoor Unit mm	830x530x340	940x640x385	995x730x445	1050x910x500
	Outdoor Unit in	32 11/16x20 7/8x13 3/8	37x25 3/16x15 3/16	39 3/16x28 3/4x17 1/2	41 11/32x35 13/16x19 11/16
Gross Weight (Kg)	Indoor Unit	11.0	11.0	17.0	17.0
	Outdoor Unit	30	36	49	64
Loading Capacity NO pipe(40'HC )		335	225	150	115
Test Standard		ARI 210-240	ARI 210-240	ARI 210-240	ARI 210-240
Approvals		ETL/AHRI	ETL/AHRI	ETL/AHRI	ETL/AHRI
Features					
LED Display on Front Panel		Yes	Yes	Yes	Yes
LED Dimmer		Yes	Yes	Yes	Yes
7 Indoor Fan Speed		Yes	Yes	Yes	Yes
LCD Wireless Remote Controller		Yes	Yes	Yes	Yes
"I feel" in remote controller		Yes	Yes	Yes	Yes
Back lighting remote controller		Yes	Yes	Yes	Yes
-15°C (5°F) Heating		Yes	Yes	Yes	Yes
-15°C (5°F) Cooling		Yes	Yes	Yes	Yes

Working Temperature Range - Cooling (°C/°F)	-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)
Working Temperature Range - Heating (°C/°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)
Remote Control Adjustable Temperature Range - Cooling	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
Remote Control Adjustable Temperature Range - Heating	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
8°C (46°F) Heating to avoid freezing water pipe in Kitchen	Yes	Yes	Yes	Yes
°C & °F convertible	Yes	Yes	Yes	Yes
2 Ways Draining Connection (Left or Right)	Yes	Yes	Yes	Yes
Compressor Intelligent Pre-heating	Yes	Yes	Yes	Yes
Smart Function	Yes	Yes	Yes	Yes
Super Function	Yes	Yes	Yes	Yes
Auto Restart	Yes	Yes	Yes	Yes
Auto Defrost	Yes	Yes	Yes	Yes
Auto Cleaning	Yes	Yes	Yes	Yes
Quiet Mode	Yes	Yes	Yes	Yes
24 Hours Timer	Yes	Yes	Yes	Yes
Removable and washable Panel	Yes	Yes	Yes	Yes
Louver Position Memory	Yes	Yes	Yes	Yes
Washable High Definition Filter	Yes	Yes	Yes	Yes
Horizontal Auto Swing Louver	Yes	Yes	Yes	Yes
Chassis Electric heater function	Yes	Yes	Yes	Yes
Vertical Auto Swing Louver	Yes	Yes	Yes	Yes
Healthy Filter(catechins,VC,HEPA,jasmine aroma filter)	Optional	Optional	Optional	Optional
Wired control	Optional	Optional	Optional	Optional

Model No.		AS-09TR3SVEDC	AS-12TR3SXEDC	AS-18TR3SBBDC	AS-24TR3SDBDC
Type		T1, INVERTER	T1, INVERTER	T1, INVERTER	T1, INVERTER
Performance					
Cooling Capacity	Btu/h	9000	12000	18000	24000
Heating Capacity	Btu/h	/	/	/	/
Rated Input-Cooling	W	670	920	1385	1845
Rated Input-Heating	W	/	/	/	/
SEER	Cooling	20.9	21.4	23.4	20.9
HSPF	Heating	/	/	/	
EER for Cooling	Btu/W	13.43	13.04	13.00	11.73
COP for Heating	Btu/W	/	/		/
E-STAR__V5.0	ASHP: SEER>15, EER>12.5, HSPF>8.5 CAC: SEER>15, EER>12.5	Yes	Yes	Yes	No
Most Efficient 2016	ASHP: SEER>20,	Yes	Yes	Yes	No

	EER>12.5, HSPF>10 CAC: SEER>20, EER>12.5				
CEE Qualifying Tier	Tier0 - 14.5SEER, 12EER, (8.5HSPF) Tier1 - 15SEER, 12.5EER, (8.5HSPF) Tier2 - 16SEER, 13EER, (9HSPF) Tier3 - 18SEER,13EER, (10HSPF)	Tier3	Tier3	Tier3	No
Moisture Removal	L/H.r	0.9	1.2	1.5	2.4
Air Circulation	m3/h	580	620	1100	1200
Refrigerant		R410A	R410A	R410A	R410A
Refrigerant charge volume	g	930	1110	1510	1840
Indoor Sound Pressure(H/M/L/silence)	dB (A)	38/32/29/26	39/32/29/26	45/41/37/34	48/45/40/36
Outdoor Sound pressure	dB (A)	53	53	55	58
Voltage, Frequency, Phase	V	230V~,208V~,60Hz,1P			
Rated Current	Cooling (A)	3.1	4.1	6.3	8.3
	Heating (A)	/	/	/	
System					
Compressor type		Rotary	Rotary	Rotary	Rotary
Compressor MFG		Hitachi	GMCC	GMCC	GMCC
Compressor model #		ASD088RKQA6JT6	ASN108D32UFZ	ATM150D43UFZ	ATF235D22UMT
Expansion Device		capillary	capillary	capillary	capillary
Indoor DC motor		No	No	Yes	Yes
Indoor motor power output	W	14	14	35	35
Indoor motor speed	S/H/M/L	1250/1100/9500	1250/1100/9500	1100/960/800	1200/1040/880
Outdoor DC motor		Yes	Yes	Yes	Yes
Outdoor motor power input	W	30	30	60	61
Outdoor motor speed	H/M/L	880/650/450	800/650/450	840/650/500	1200/550/500
Evaporator					
Evaporator material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Evaporator length x height x width	mm	620x294x27.2	620x294x27.2	842x378x27.2	842x336x272

Tube pitch(a)x row pitch(b)	mm	21x13.6	21x13.6	21x13.6	21x13.6
Fin spacing	mm	1.4	1.4	1.4	1.4
Condenser					
Condenser material		Copper tube and Aluminum Fin			
Number of rows		2	2	2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube	Φ7,innergroove tube
Condenser length x height x width	mm	( 684+655)X462x36.4	842x546x18.19 +813x546x18.19	895x630x18.2 867x630x18.2	842x27.2x378
Tube pitch(a)x row pitch(b)	mm	21x18.19	21x18.19	21x18.19	21x18.19
Fin spacing	mm	1.4	1.4	1.6	1.5
Connecting Pipe Diameter					
Liquid Pipe	inch	1/4	1/4	1/4	3/8
Gas Pipe	inch	3/8	3/8	1/2	5/8
Others					
Net Dimensions WxHxD (mm)	Indoor Unit mm	870x270x214	870x270x214	1148x315x236	1148x315x236
	Indoor Unit in	34 1/4x11x8 11/16	34 1/4x11x8 11/16	45 3/16x12 13/16x9 5/8	45 3/16x12 13/16x9 5/8
	Outdoor Unit mm	715x482x240	810x585x280	860x650x310	885x795x366
	Outdoor Unit in	28 1/8x19x9 7/16	31 7/8x23x11	33 7/8x25 9/16x12 3/16	34 7/8x31 5/16x14 3/8
Net Weight (Kg)	Indoor Unit	8.5	9.0	14.5	14.5
	Outdoor Unit	26.0	33.0	44	54
Packing Dimensions WxHxD (mm)(With pipe)	Indoor Unit mm	900x335x260	900x335x260	1210x390x315	1210x390x315
	Indoor Unit in	35 7/16x13 3/16x10 7/16	35 7/16x13 3/16x10 7/16	47 5/8x15 3/8x12 7/16	47 5/8x15 3/8x12 7/16
	Outdoor Unit mm	830x530x340	940x640x385	995x730x445	1050x910x500
	Outdoor Unit in	32 11/16x20 7/8x13 3/8	37x25 3/16x15 3/16	39 3/16x28 3/4x17 1/2	41 11/32x35 13/16x19 11/16
Gross Weight (Kg)	Indoor Unit	11.0	11.0	17.0	17.0
	Outdoor Unit	29	36	48	62
Loading Capacity NO pipe(40'HC )		335	225	150	115
Test Standard		ARI 210-240	ARI 210-240	ARI 210-240	ARI 210-240
Approvals		ETL/AHRI	ETL/AHRI	ETL/AHRI	ETL/AHRI
Features					
LED Display on Front Panel		Yes	Yes	Yes	Yes
LED Dimmer		Yes	Yes	Yes	Yes
7 Indoor Fan Speed		Yes	Yes	Yes	Yes
LCD Wireless Remote Controller		Yes	Yes	Yes	Yes
"I feel" in remote controller		Yes	Yes	Yes	Yes
Back lighting remote controller		Yes	Yes	Yes	Yes
-15°C (5°F) Heating		No	No	No	No
-15°C (5°F) Cooling		Yes	Yes	Yes	Yes
Working Temperature Range - Cooling (°C/°F)		-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)	-15°C-46°C; (5°F-115°F)

Working Temperature Range - Heating (°C/°F)	No	No	No	No
Remote Control Adjustable Temperature Range - Cooling	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
Remote Control Adjustable Temperature Range - Heating	No	No	No	No
8°C (46°F) Heating to avoid freezing water pipe in Kitchen	No	No	No	No
°C & °F convertible	Yes	Yes	Yes	Yes
2 Ways Draining Connection (Left or Right)	Yes	Yes	Yes	Yes
Compressor Intelligent Pre-heating	No	No	No	No
Smart Function	Yes	Yes	Yes	Yes
Super Function	Yes	Yes	Yes	Yes
Auto Restart	Yes	Yes	Yes	Yes
Auto Defrost	Yes	Yes	Yes	Yes
Auto Cleaning	Yes	Yes	Yes	Yes
Quiet Mode	Yes	Yes	Yes	Yes
24 Hours Timer	Yes	Yes	Yes	Yes
Removable and washable Panel	Yes	Yes	Yes	Yes
Louver Position Memory	Yes	Yes	Yes	Yes
Washable High Definition Filter	Yes	Yes	Yes	Yes
Horizontal Auto Swing Louver	Yes	Yes	Yes	Yes
Chassis Electric heater function	No	No	No	No
Vertical Auto Swing Louver	Yes	Yes	Yes	Yes
Healthy Filter(catechins,VC,HEPA,jasmine aroma filter)	Optional	Optional	Optional	Optional
Wired control	Optional	Optional	Optional	Optional

Model No.		AS-30UR3SDKVT	AS-36UR3SDKVT
Type		T1, INVERTER	T1, INVERTER
Performance			
Cooling Capacity	Btu/h	30000	33,000
Heating Capacity	Btu/h	31000	33,500
Rated Input-Cooling	W	2900	3300
Rated Input-Heating	W	2700	3100
SEER	Cooling	18.8	17.6
HSPF	Heating	12.3	9.6
EER for Cooling	Btu/W	10	10.00
COP for Heating	Btu/W	8.5	10.81
Moisture Removal	L/H.r	3	3.2
Air Circulation	m3/h	1800	1800
Refrigerant		R410A	R410A
Refrigerant charge volume	g	2070	2250
Indoor Sound Pressure(H/M/L/silence)	dB (A)	50/45/40/38	50/45/40/38
Outdoor Sound pressure	dB (A)	60	60
Voltage, Frequency, Phase	V		





Rated Current	Cooling (A)	12.8	14.8
	Heating (A)	12.0	13.8
System			
Compressor type		Rotary	Rotary
Compressor MFG		Hitachi	Hitachi
Compressor Model #		ATL253UDPC9AUL	ATL253UDPC9AUL
Expansion Device		Capillary	EEV
Indoor DC motor		Yes	Yes
Indoor motor power output	W	50	50
Indoor motor speed	S/H/M/L/Mutter	1150/1000/850	1150/1000/850
Outdoor DC motor		Yes	Yes
Outdoor motor power output	W	70	70
Indoor motor speed	H/M/L	850/550/500	850/550/500
Evaporator			
Evaporator material			
Number of rows		2	2
Tube outside dia.and type	mm	Φ7,innergroove tube	Φ7,innergroove tube
Evaporator length x height x width	mm	985x420x27.6	985x420x27.6
Tube pitch(a)x row pitch(b)	mm	19x13.6	19x13.6
Fin spacing	mm	1.4	1.4
Condenser			
Condenser material			
Number of rows		2	2.5
Tube outside dia.and type	mm	φ7 innergroove tube	φ7 innergroove tube
f.Condensor length x height x width	mm	(970+942)x756x18.19	(970+942+550)x756x18.19
Tube pitch(a)x row pitch(b)	mm	21x18.19	21x18.19
Fin spacing	mm	1.6	1.6
Connecting Pipe Diameter			
Liquid Pipe	inch	3/8	3/8
Gas Pipe	inch	5/8	5/8
Others			
Net Dimensions WxHxD	Indoor Unit mm	1280x360x260	1280x360x260
	Indoor Unit in	50 3/8x14 3/16x10 1/4	50 3/8x14 3/16x10 1/4
	Outdoor Unit mm	885x795x366	885x795x366
	Outdoor Unit in	34 7/8x31 5/16x14 3/8	34 7/8x31 5/16x14 3/8
Net Weight (Kg)	Indoor Unit	19.5	18.0
	Outdoor Unit	58	60
Packing Dimensions WxHxD	Indoor Unit mm	1385x435x325	1385x435x325
	Indoor Unit in	54 1/2x17 1/8x12 13/16	54 1/2x17 1/8x12 13/16
	Outdoor Unit mm	1050x910x500	1050x890x500
	Outdoor Unit in	41 11/32x35 13/16x19 11/16	41 11/32x35 13/16x19 11/16
Gross Weight (Kg)	Indoor Unit	23.0	21.5
	Outdoor Unit	63	65
Loading Capacity NO pipe(40'HC )		105	105

Test Standard	ARI 210-240	ARI 210-240
Approvals	ETL/AHRI	ETL/AHRI
Features		
LED Display on Front Panel	Yes	Yes
LED Dimmer	Yes	Yes
7 Indoor Fan Speed	Yes	Yes
LCD Wireless Remote Controller	Yes	Yes
"I feel" in remote controller	Yes	Yes
Back lighting remote controller	Yes	Yes
-15°C (5°F) Heating	Yes	Yes
-15°C (5°F) Cooling	Yes	Yes
Working Temperature Range - Cooling (°C/°F)	0°C-46°C; (32°F-115°F)	0°C-46°C; (32°F-115°F)
Working Temperature Range - Heating (°C/°F)	-20°C-24°C; (-4°F-75°F)	-20°C-24°C; (-4°F-75°F)
Remote Control Adjustable Temperature Range - Cooling	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
Remote Control Adjustable Temperature Range - Heating	16°C-30°C; (61°F-86°F)	16°C-30°C; (61°F-86°F)
8°C (46°F) Heating to avoid freezing water pipe in Kitchen	Yes	Yes
°C & °F convertible	Yes	Yes
2 Ways Draining Connection (Left or Right)	Yes	Yes
Compressor Intelligent Pre-heating	Yes	Yes
Smart Function	Yes	Yes
Super Function	Yes	Yes
Auto Restart	Yes	Yes
Auto Defrost	Yes	Yes
Auto Cleaning	Yes	Yes
Quiet Mode	Yes	Yes
24 Hours Timer	Yes	Yes
Removable and washable Panel	Yes	Yes
Louver Position Memory	Yes	Yes
Washable High Definition Filter	Yes	Yes
Horizontal Auto Swing Louver	Yes	Yes
Chassis Electric heater function	Yes	Yes
Healthy Filter(catechins,VC,HEPA,jasmine aroma filter)	Optional	Optional
Wired control	Optional	Optional

### 3. Product Pictures and Dimensions

#### 3-1.1 Product Pictures - Indoor Units

Unit	View
(DF Panel)	 <p>The DF Panel indoor unit is shown from two perspectives. The top image is a front view, displaying a white rectangular unit with a central digital display and a horizontal air outlet. The bottom image is a side view, showing the unit's depth and a vertical handle on the side.</p>
(VQ Panel)	 <p>The VQ Panel indoor unit is shown from two perspectives. The top image is a front view, displaying a white rectangular unit with a horizontal air outlet and a small digital display. The bottom image is a side view, showing the unit's depth and a vertical handle on the side.</p>


3-1.2 Product Pictures - Outdoor Units:

Unit	V (W1M)	X (W1P)
	A white outdoor air conditioning unit with a large circular fan grille on the left and a control panel on the right. The unit is mounted on a wall with two visible mounting brackets.	A white outdoor air conditioning unit, similar to the V (W1M) model, but with a slightly different control panel design.
Unit	B (W2N)	D (W5F)
	A white outdoor air conditioning unit with a large circular fan grille on the left and a control panel on the right. The unit is mounted on a wall with two visible mounting brackets.	A white outdoor air conditioning unit with a large circular fan grille on the left and a control panel on the right. The unit is mounted on a wall with two visible mounting brackets.

3-1.3 Product Pictures - Remote controller:


Unit	View
J1	A silver remote control with a digital display at the top showing '88' and '08:08'. Below the display are several buttons including 'ON/OFF', 'MODE', 'FAN', 'SWING', 'SLEEP', 'TIMER', 'RESET', 'POWER', 'TEMP', 'MODEL', 'TEMP UP', 'TEMP DOWN', and 'LOCK'. The Hisense logo is at the bottom.

### 3-2.1 Product Dimensions - Indoor Units

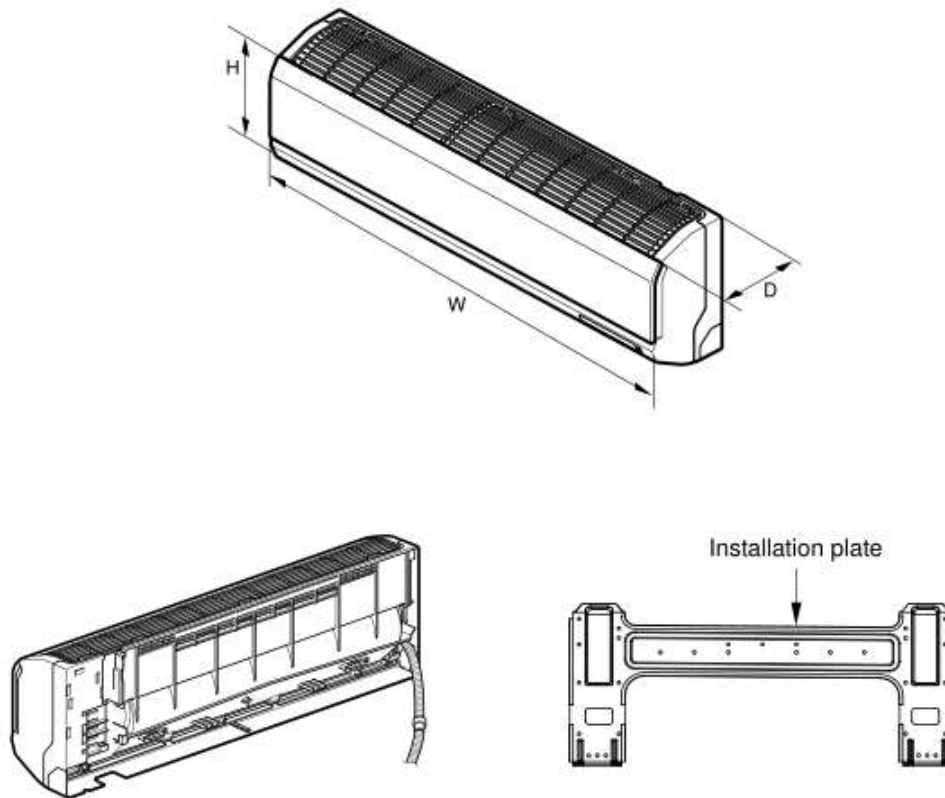

Model	WXHxD (mm)
AS-09TR3SVDDH	745x270x214
AS-09UR3SVDDH	745x270x214
AS-12TR3SVEDH	815x270x214
AS-12UR3SVEDH	815x270x214
AS-18TR3SXADH	915x315x236
AS-18UR3SXADH	915x315x236
AS-24TR3SBBDH	1085x315x236
AS-24UR3SBBDH	1085x315x236
AS-09TR3SVEDC	870x270x214
AS-09UR3SVEDC	870x270x214
AS-12TR3SXEDC	870x270x214
AS-12UR3SXEDC	870x270x214
AS-18TR3SBBDC	1148x315x236
AS-18UR3SBBDC	1148x315x236
AS-24TR3SDBDC	1148x315x236
AS-24UR3SDBDC	1148x315x236
AS-30UR3SDKVT	1280x360x260
AS-36UR3SDKVT	1280x360x260

### 3-2.2 Product Dimensions - Outdoor Units:

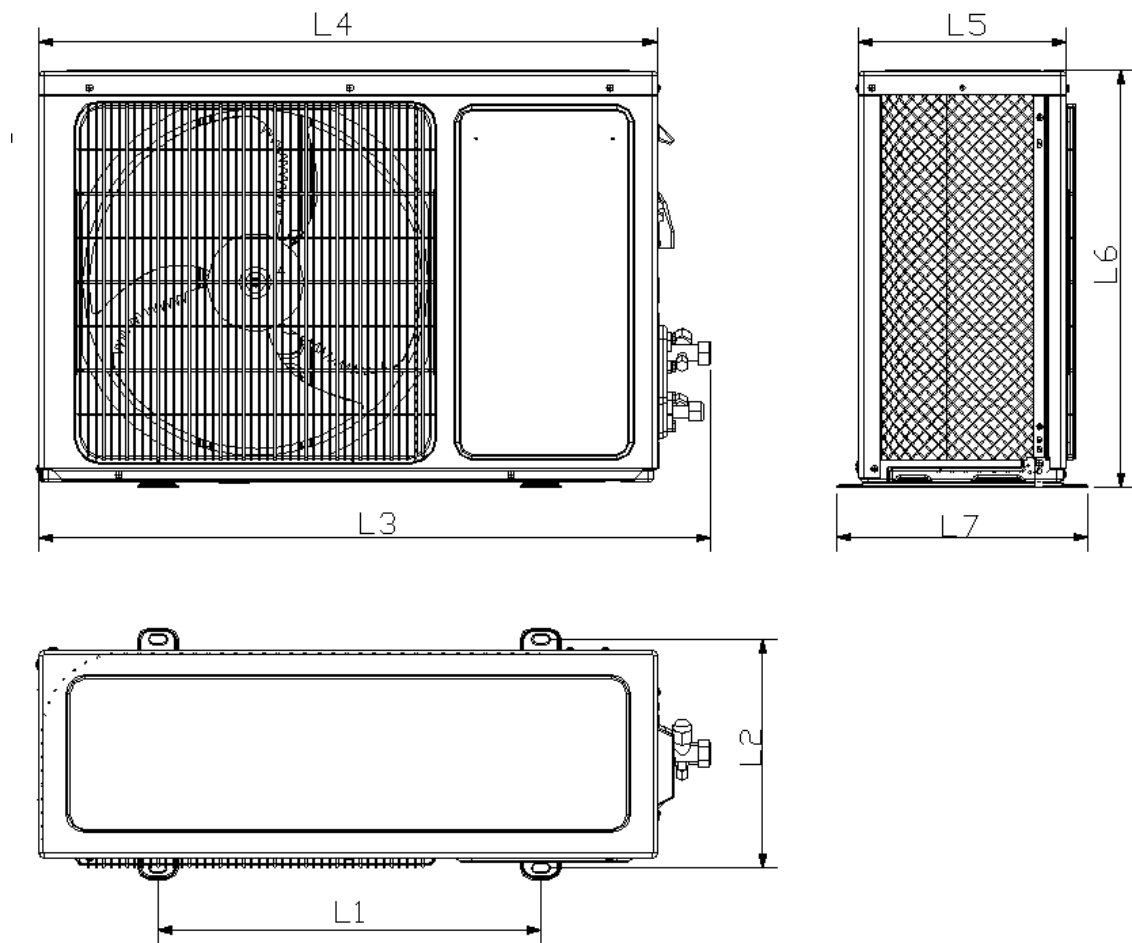

Model	L1 (mm)	L2 (mm)	L3 (mm)	L4 (mm)	L5 (mm)	L6 (mm)	L7 (mm)
AS-09TR3SVDDH	443	264	776	715	240	486	290
AS-09UR3SVDDH	443	264	776	715	240	486	290
AS-12TR3SVEDH	443	264	776	715	240	486	290
AS-12UR3SVEDH	443	264	776	715	240	486	290
AS-18TR3SXADH	510	310	873	810	280	585	338
AS-18UR3SXADH	510	310	873	810	280	585	338
AS-24TR3SBBDH	542	341	935	860	310	667	368
AS-24UR3SBBDH	542	341	935	860	310	667	368
AS-09TR3SVEDC	443	264	776	715	240	486	290
AS-09UR3SVEDC	443	264	776	715	240	486	290
AS-12TR3SXEDC	510	310	873	810	280	585	338
AS-12UR3SXEDC	510	310	873	810	280	585	338
AS-18TR3SBBDC	542	341	935	860	310	667	368
AS-18UR3SBBDC	542	341	935	860	310	667	368
AS-24TR3SDBDC	662	390	959	884	365	793	414
AS-24UR3SDBDC	662	390	959	884	365	793	414
AS-30UR3SDKVT	662	390	959	884	365	793	414
AS-36UR3SDKVT	662	390	959	884	365	793	414

## 4. Installation Instruction



### WARNING

To prevent abnormal heat generation and the possibility of fire, do not place obstructions, enclosures, and/or grilles in front of or surrounding the air conditioner in a way that may block air flow. Place more than 1 meter away from any antennas, power lines, or connecting wires used for TV, radio, telephones, security systems, or intercoms. Electrical noise from any of these sources may affect operation.


### 4-1.1 Installation Place and Condition - Indoor Unit

#### Avoid:

- △ Constant direct sunlight;
- △ Nearby heat sources that may affect performance of the unit;
- △ Areas where leakage of flammable gas may be expected;
- △ Areas large amounts of oil mist may exist.

#### Do:

- △ Select unit placement from which every corner of the room can be uniformly cooled.
- △ Select a unit placement that will support the weight of the unit.
- △ Select a location where copper tubing and condensation drain hose have the shortest run to outdoors. (See **A**)
- △ Allow room for operation and maintenance as well as unrestricted air flow around the unit. (See **B**)
- △ Install the unit within the maximum elevation difference (**H**) above or below the outdoor unit and within total tubing length (**L**) from the outdoor unit as detailed (See diagram **C** below and **Table 4-1.1**)

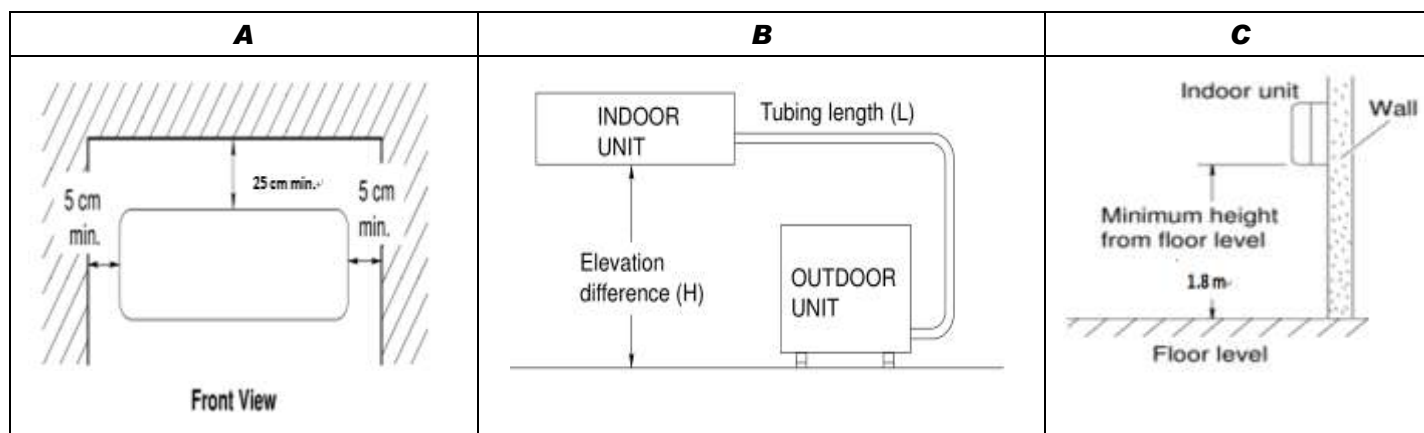

**Table 4-1.1**

Capacity (Btu/h)	Pipe Size		Standard Length (m)	Max. Elevation H (m)	Max. Length L (m)	Additional Refrigerant (g/m)
	GAS	LIQUID				
5k~14k	3/8"(Ø9.52)	1/4"(Ø6.35)	7.5	7	15	20
	1/2"(Ø12.7)	1/4"(Ø6.35)	7.5	7	15	20
18k~28k	1/2"(Ø12.7)	1/4"(Ø6.35)	7.5	15	30	20
	5/8"(Ø15.88)	1/4"(Ø6.35)	7.5	15	30	20
	5/8"(Ø15.88)	3/8"(Ø9.52)	7.5	15	30	30
30k~38k	5/8"(Ø15.88)	3/8"(Ø9.52)	7.5	15	30	30
	3/4"(Ø19.05)	3/8"(Ø9.52)	7.5	15	30	50

\* If total tubing length is beyond 7.5—15m (or max length listed), charge with additional refrigerant using reference table above. No additional compressor oil should be necessary.




## 4-1.2 Installation Place and Condition - Outdoor Unit

### Avoid:

- △ Heat sources, exhaust fans, etc.;
- △ Damp, humid, or uneven locations.

### Do:

- △ Choose a place as cool as possible.
- △ Choose a place that is well ventilated.
- △ Allow enough room around the unit for air intake, exhaust, and possible maintenance. (see **A1**, **B1**, **C1**)
- △ Provide a solid base (level concrete pad, concrete block, 10 × 40 cm beams or equal), a minimum of 10 cm above ground level to reduce humidity and protect the unit against possible water damage and decreased service life.
- △ Install rubber cushions under unit feet to reduce vibration and noise.
- △ Use lug bolts or equivalent to bolt down unit to reduce vibration and noise.
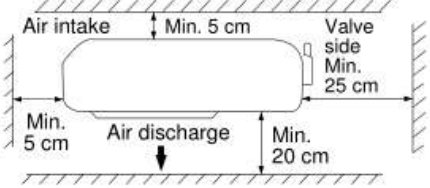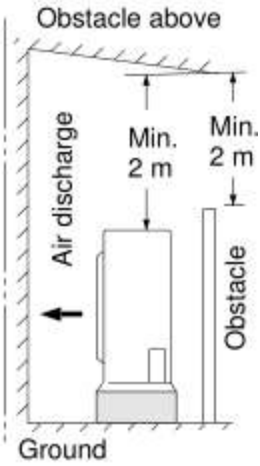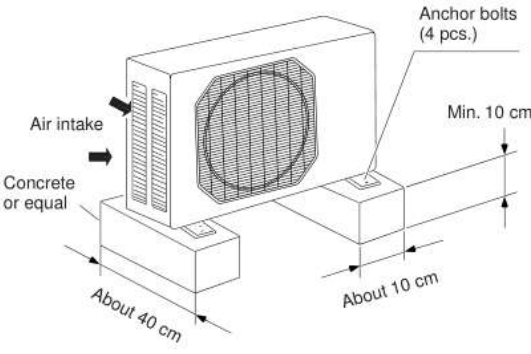
<b>A1</b>	<b>B1</b>	<b>C1</b>
		

### Recommended Wire Diameter:

Capacity Size	Wire Diameter (mm <sup>2</sup> )	Fuse or Circuit Breaker Capacity
5K~12k	1.0 (Power wire) / 1.0 (Connect wire)	3.15A (Indoor) / 15A (Outdoor)
18k	2.5 (Power wire) / 1.5 (Connect wire)	3.15A (Indoor) / 20A (Outdoor)
22K~30K	2.5 (Power wire) / 2.5 (Connect wire)	3.15A (Indoor) / 30A (Outdoor)




## 4-2.1 Electric Wiring Diagram


Model	Indoor Unit DIAGRAM #	Outdoor Unit DIAGRAM #
AS-09TR3SVDDH	1854605	1854707
AS-09UR3SVDDH	1854605	1854707
AS-12TR3SVEDH	1854605	1854707
AS-12UR3SVEDH	1854605	1854707
AS-18TR3SXADH	1854605	1854707
AS-18UR3SXADH	1854605	1854707
AS-24TR3SBBDH	1854605	1854707
AS-24UR3SBBDH	1854698	1854707
AS-09TR3SVEDC	1854698	1854707
AS-09UR3SVEDC	1854605	1854707
AS-12TR3SXEDC	1854605	1854707
AS-12UR3SXEDC	1854605	1854707
AS-18TR3SBBDC	1854605	1854707
AS-18UR3SBBDC	1854698	1854707
AS-24TR3SDBDC	1854698	1854707
AS-24UR3SDBDC	1854698	1854707
AS-30UR3SDKVT	1854698	1854707
AS-36UR3SDKVT	1852066	1854707
AS-09TR3SVDDH	1852066	1854707

## 4-2.2 Indoor Diagrams:


1852066

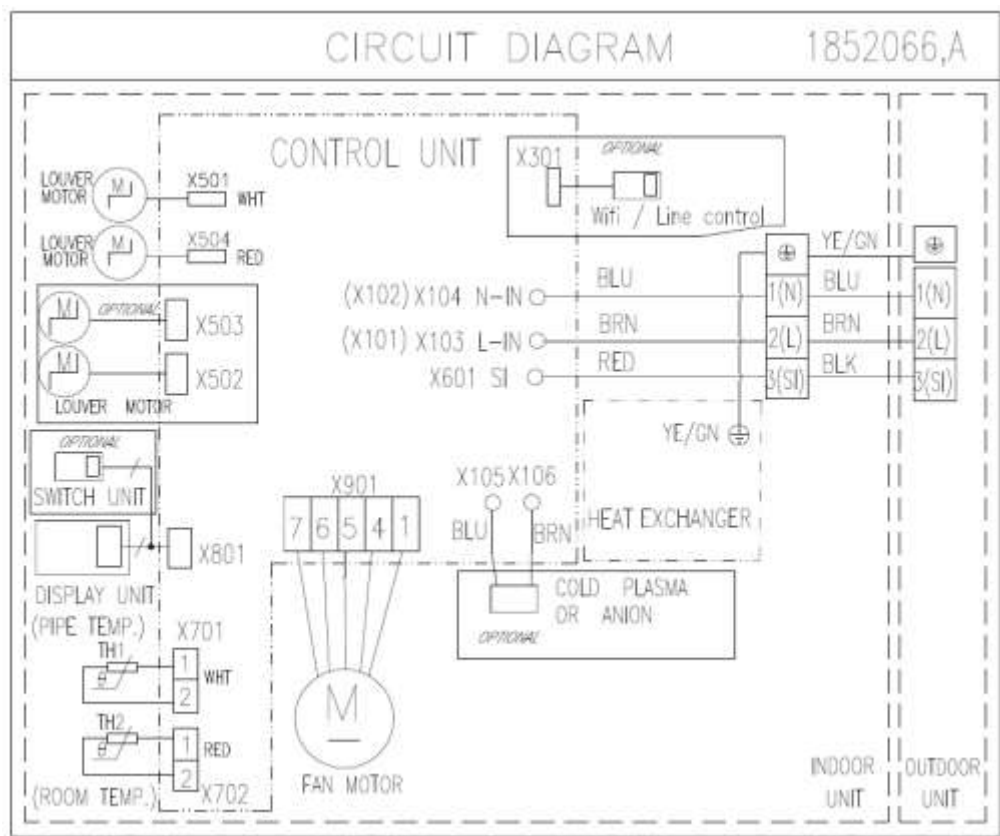

## 1854605

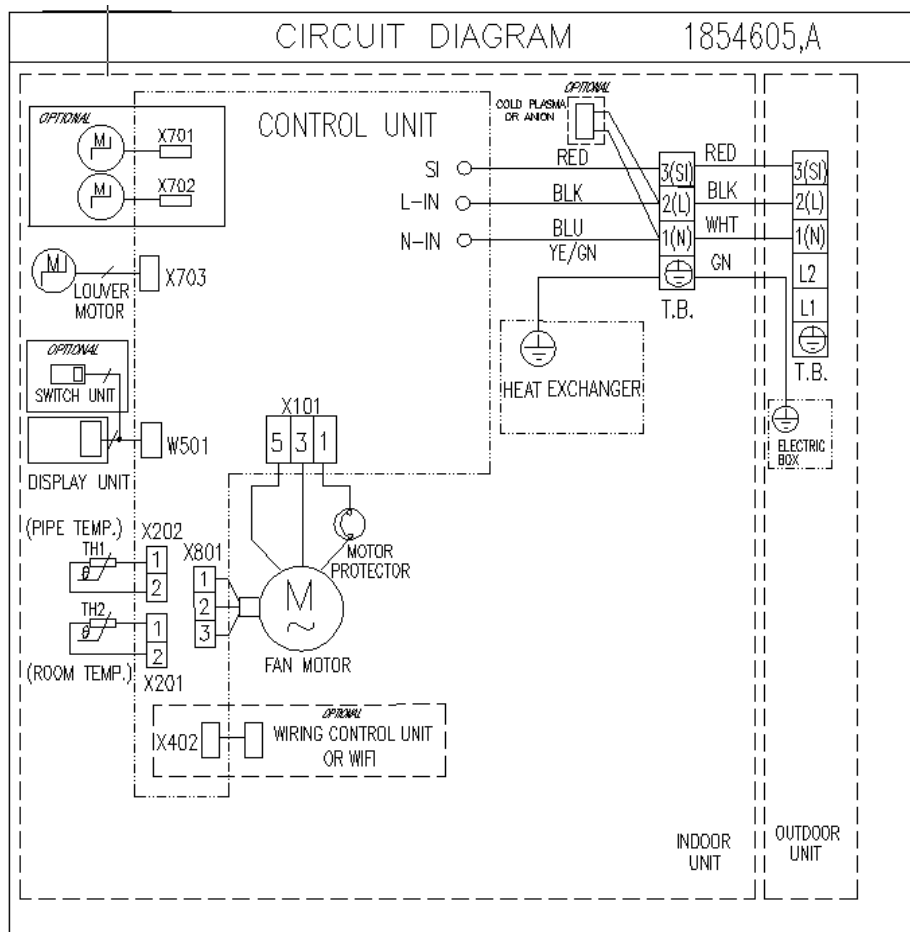


## 1854698

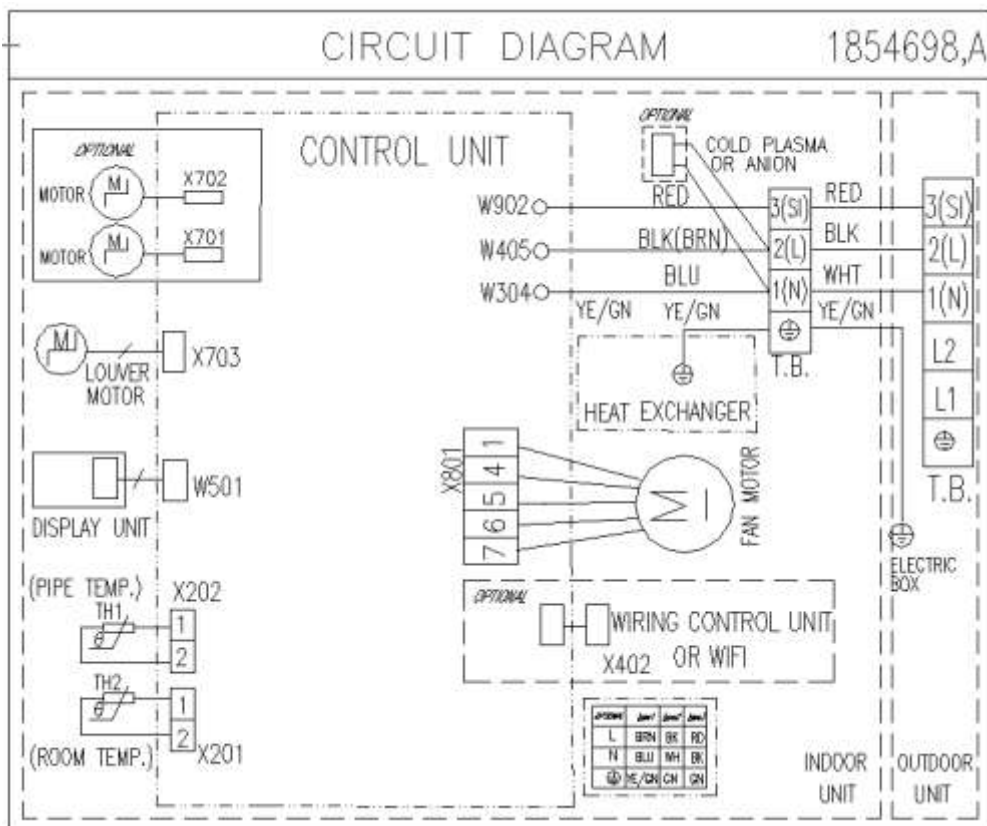


### 4-2.3 Outdoor Diagrams:

1854707

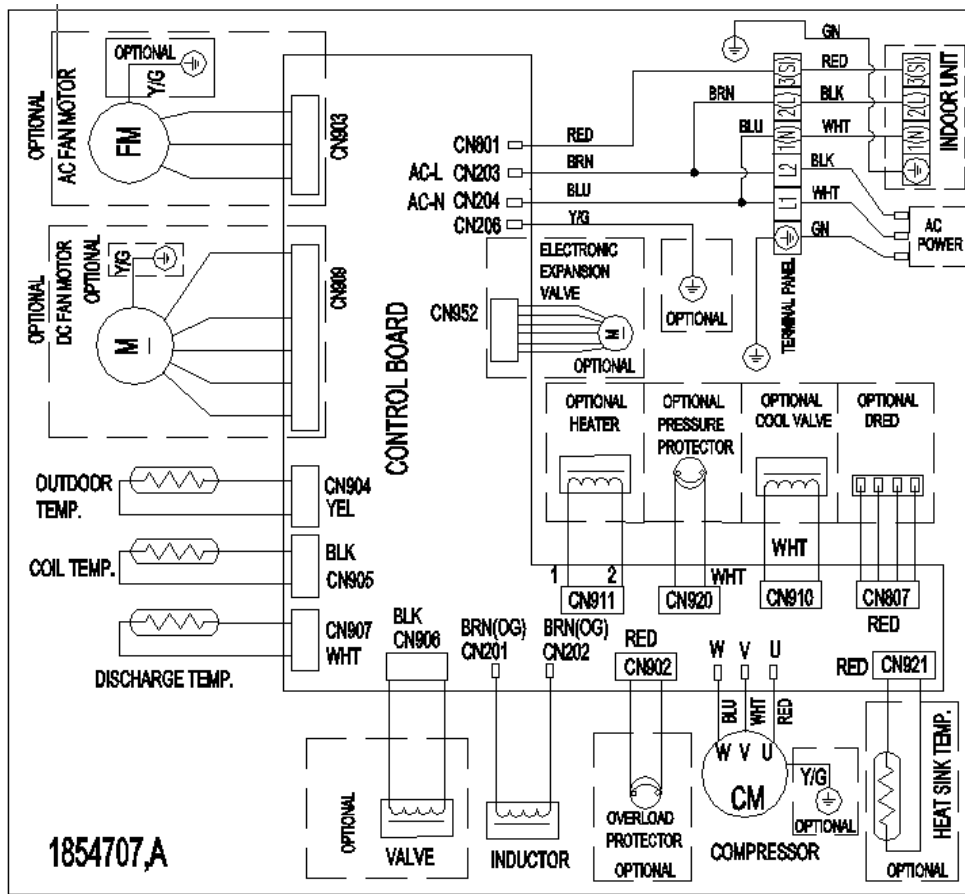


### 4-3. Refrigerant Flow System

(1) Cooling

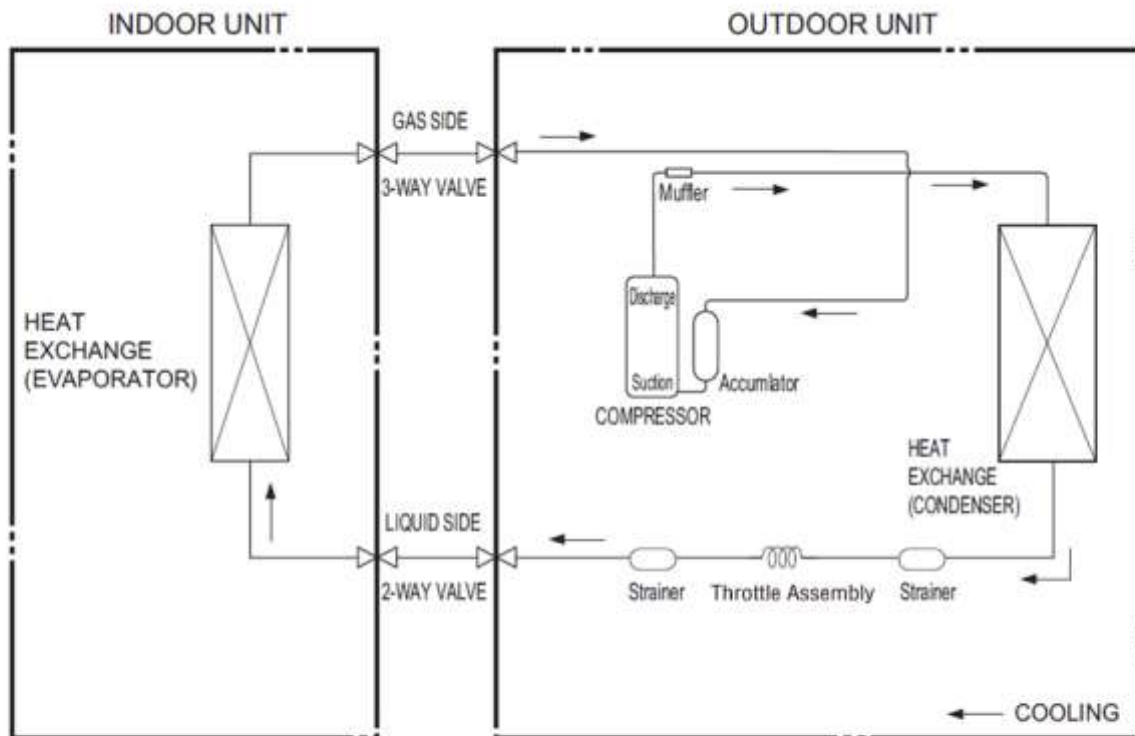


(2) Cooling&Heating

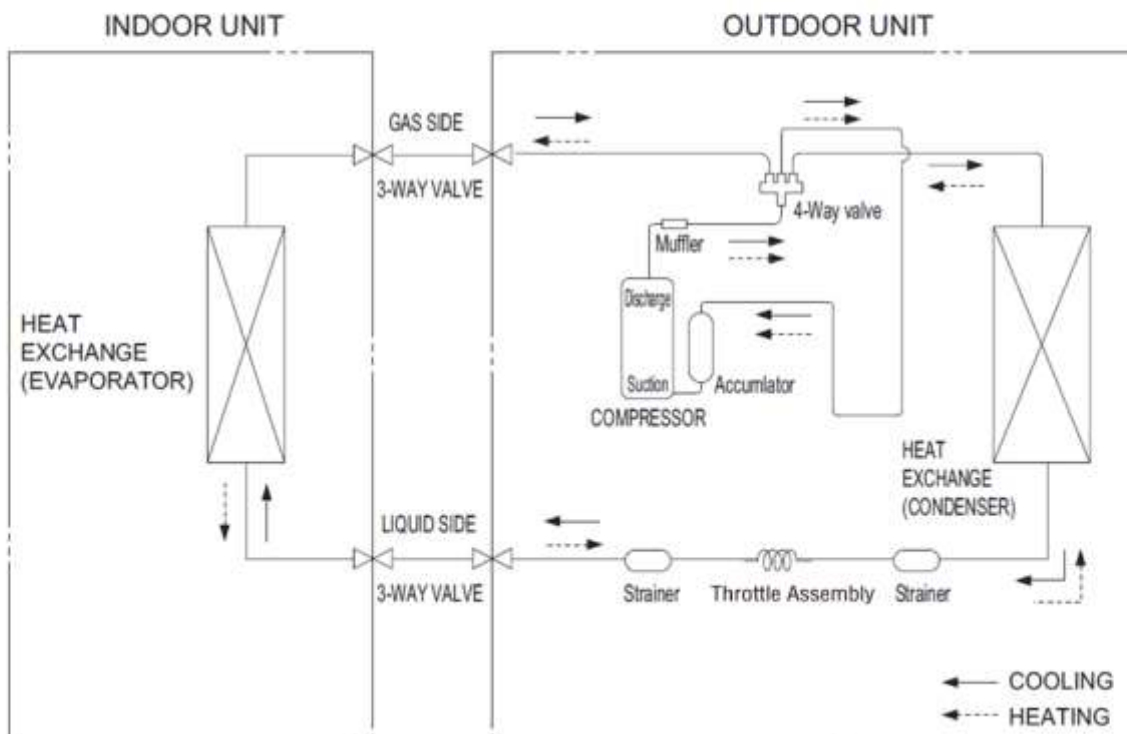

» NOTE: In different models, throttle assembly may be Capillary -OR- Electronic expansion valve.

#### 4-4. Air Purging and Leakage Test

1. Connect charging hose of manifold valve to charge end of low pressure valve (both high/low pressure valves must be tightly shut).
2. Connect joint of charging hose to vacuum pump.
3. Fully open the handle of Lo manifold valve.
4. Open the vacuum pump to evacuate. At the beginning, slightly loosen joint nut of low pressure valve to check if there is air coming inside (this should change the noise of vacuum pump and/or make the reading on multimeter 0). Then tighten the nut.
5. Keep evacuating for at least 15mins and make sure reading on multi-meter is  $-1.0 \times 10^5$  pa ( $-76\text{cmHg}$ ).
6. Check the vacuum with the gage manifold valve, then close the gage manifold valve, and stop the vacuum pump.
7. Let it set for 1-2 minutes. Make sure the pointer of the gage manifold valve remains in the same position.
8. Remove the gage manifold valve quickly from the service port of the stop valve.
9. After refrigerant pipes are connected and evacuated, fully open all stop valves on gas and liquid pipe sides.  
» NOTE: Not fully opening the valves lowers the performance and can be dangerous and/or damage the units.
10. Tighten the cap to the service port and prepare to make initial system status check.
11. Retighten all necessary caps.
12. Test for leaks.

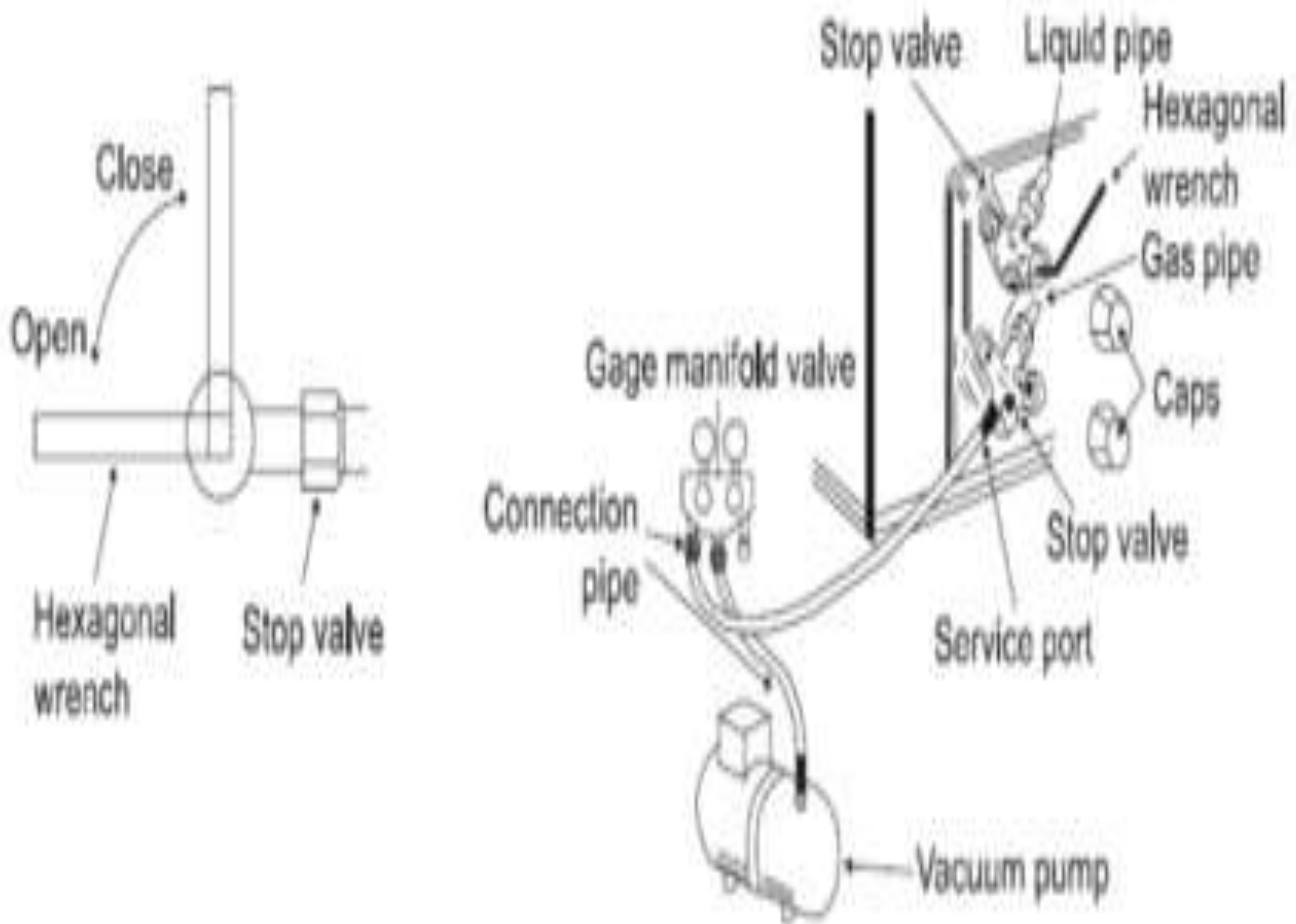

## 4-5. Test Running

### Δ 4-5.1 - Check after Installation:

Items to be checked	Possible malfunction
Have all parts been connected firmly?	The unit may drop, shake, or make noise.
Have you done refrigerant leakage tests?	System may exhibit insufficient cooling/heating performance.
Is heat insulation sufficient?	Parts may experience condensation and dripping.
Is water drainage satisfactory?	Parts may experience condensation and dripping.
Is voltage in accordance with the rated voltage marked on nameplate?	Incorrect voltage may cause electric malfunction or damage to system.
Are the electrical wires and piping connections installed correctly and securely?	Loose connections may cause electric malfunction or damage to system.
Has the unit been connected to a secure earth connection?	Insufficient grounding may cause electrical malfunction.
Is the power cord correct and sufficient?	Poor cabling may cause electric malfunction or damage to system.
Are any inlet and outlet openings blocked?	Blockage may cause insufficient cooling/heating performance.
Are length of copper connection pipes and initial refrigerant capacity recorded?	Refrigerant capacity/pressure will not be accurate and may lead to insufficient cooling/heating performance.

### Δ 4-5.2 - Operation Test:

#### • Before Operation Test

- Do not switch on power before installation is finished completely.
- Electric wiring must be connected correctly and securely.
- Refrigerant cut-off valves to the copper connection pipes should be opened.
- All impurities or debris such as scraps and thrums must be cleared from the unit.

#### • Operation Test

1. Switch on power and press “**ON/OFF**” button on the remote controller to start operation.
2. Press **MODE** button to select the COOL, HEAT (if system is cooling only, heat will not be available), FAN to ensure all core operations are normal and functional.

## 5. Function Operation

### 5-1. Operation Range (Cooling and Heating)

SEER 17

	Temperature	Indoor Air Intake Temp.	Outdoor Air Intake Temp
COOLING	Maximum	30°	46°
	Minimum	16°	16°
HEATING	Maximum	30°	24°
	Minimum	/	-20°

### 5-2. Remote Controller Operation & Functions

#### 5-2.1 Operation Instructions

##### Remote controller

The remote controller transmits signals to the system.

##### 1 ON/OFF BUTTON

The appliance will be started when it is energized or will be stopped when it is in operation, if you press this button.

##### 2 MODE BUTTON

Press this button to select the operation mode.

##### 3 FAN BUTTON

Used to select fan speed in sequence auto, high, medium or low.

##### 4 5 ROOM TEMPERATURE SETTING BUTTONS

Used to adjust the room temperature and the timer, also real time.

##### 6 SMART BUTTON

Used to enter fuzzy logic operation directly, regardless of the unit is on or off.

##### 7 SWING BUTTON

Used to stop or start vertical adjustment louver swinging and set the desired up/down airflow direction.

##### 8 SLEEP BUTTON

Used to set or cancel Sleep Mode operation.

##### 9 IFEEL BUTTON

Used to set IFEEL mode operation. Press it once, the IFEEL function will be started. Press it again, the IFEEL function will be shut off. If the IFEEL function can't be shut off, please try to press this button about 5 seconds. Advice to put the remote controller in the place where the indoor unit receive signal easily. Advice to cancel the IFEEL mode so as to save energy when stopping the air conditioner.

##### 10 CLOCK BUTTON

Used to set the current time.

##### 11 12 TIMER ON/OFF BUTTON

Used to set or cancel the timer operation.

Indication symbols on LCD:



Cooling indicator



Auto fan speed



Smart indicator



Signal transmit



Dry indicator



High fan speed



Sleep indicator



ON/OFF 88:88 Display set timer



Fan only indicator



Medium fan speed



Ifeel



88°C Display temperature



Heating indicator




Low fan speed



Super indicator

Note: Each mode and relevant function will be further specified in following pages.

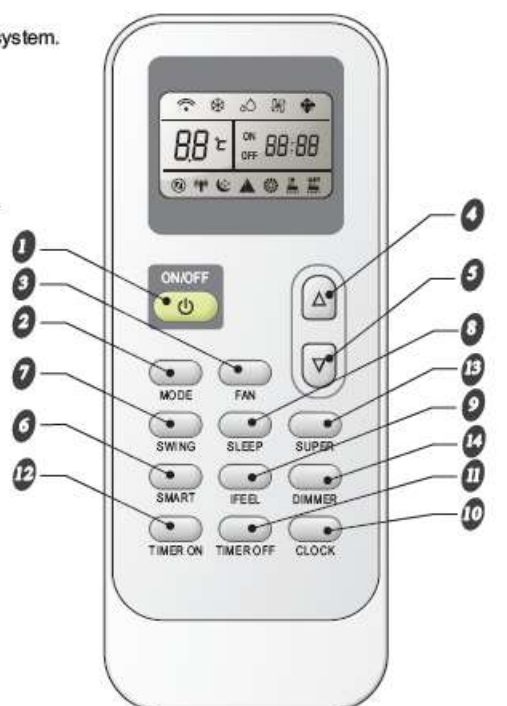

##### 13 SUPER BUTTON

Used to start or stop the fast cooling/heating. (Fast cooling operates at high fan speed with 18°C set temp automatically ; Fast heating operates at auto fan speed with 32°C set temp automatically)

##### 14 DIMMER BUTTON

When you press this button, all the display of indoor unit will be closed. Press any button to resume display.

---

## 5-2.2 Function Instructions

### 5-2.2 A - General Technical Parameters

- Maximum distance between remote and receiver (*on front of indoor air conditioner*): **8m**.
- Remote receiver angle: **Less than 60 degrees**.
- Temperature control accuracy: **±1°C**.
- Time error: **Less than 1%**.

### 5-2.2 B - Functions of the controller

#### • Display panel of the remote

- Control functions of the remote controller (*See operating and installation manual*)

#### • Display of the indoor unit

Information on the screen:

- **7-segment tube**: Displays set temperature or indoor temperature; also displays fault code when a problem is detected. The error code is displayed when the indoor unit CPU receives a diagnostic alert signal, and will flash for 5 seconds.
- **Running LED**: Turns on during operation; flashes when the unit defrosts.
- **TIMER LED**: When timer mode is active, the LED is lit.
- **Sleep LED**: When sleep mode is active, the LED will be lit; after 10s, the LED will turn itself off.
- **Compressor LED**: When compressor is running, the LED will be lit.
- **Remote control receiver**: This component receives signals from the remote control and is wired onto the display board.

### 5-2.2 C - Control functions

#### • Emergency switch

When the system is connected to power the first time and turned on, it will automatically be in Auto mode. If you press the "ON/OFF" button during normal operation, the system enters 'Stand-by state' and settings are saved.

When the system enters Stand-by state (due to an emergency power loss or other shutdown event), most settings will be saved and restored when power is restored and the unit is turned back on. Settings saved include: Operation Mode, Air Volume, Temperature Setting, and Forced Cooling. The only setting lost is Air Flow Direction.

To turn on the system without a remote from Stand-by state, press and hold the *emergency switch* for 5 seconds. A buzzer will sound once, and it will begin operating in cooling mode, with the indoor fan speed set to HIGH; in this emergency mode, you will not be able to adjust the temperature.

If the emergency switch is pressed again or the system receives a remote control signal, it will exit this mode, and will operate as usual based on the new corresponding commands from the remote.

#### • Operator-machine communication

If the system has the i-Feel function, when set to i-Feel mode by the remote control, the room temperature must be set using the remote control, and the indoor unit will detect the temperature setting from the remote using its sensor. Normally the remote will automatically transmit the control signal at a 10 minute interval (*H1* model remotes only; all other models have a 9 minute interval). However, if the room temperature changes in excess of 1°C in a very short period, the remote will detect this and transmit signal every 2 minutes. If the indoor unit has not received a remote signal within 30 minutes, the system room temperature will be set using the internal sensor of indoor unit.

#### • Timer function

- 1 Max Timer Length is **24 hours**, but can be set in 1 minute increments.
- 2 Timer can be turned ON or OFF, and set to recur on a regular schedule.
- 3 Timer accuracy is above 97%.
- 4 System can have a Timer-ON and Timer-OFF points set at the same time, but no timer setting will be indicated.



---

## • Sleep

- 1 Sleep mode can only be set in Cool, Heat, and Dehumidify ('Dry') mode.
- 2 When the system runs in Sleep mode, it will stop after 8 hours operation, canceling the Sleep setting. If the system has a programmed Timer-OFF setting when Sleep mode runs, one of two things will occur:
  - If Timer-OFF is set to less than 8 hours away when Sleep mode is engaged, the system will run in Sleep mode only until the TIMER-OFF shutdown triggers.
  - If Timer-OFF is set to more than 8 hours away when Sleep mode is engaged, the system will run in Sleep mode until it ends, turning off the system and canceling the Timer-OFF setting trigger.
- 3 When the Sleep mode is selected with Cooling mode, if the room temperature not less than 26°C, the setting temperature will not be adjusted, otherwise, the setting temperature will be raised by 1°C per hour, but the max setting temperature raise is 1°C.
- 4 When the Sleep mode is select with Heat mode, the setting temperature will be decreased by 1°C per hour during the successive 3 hour, but the max setting temperature decrease is 3°C.
- 5 When the appliance operate with Sleep mode, the indoor fan run in the LOW setting, and the air flow direction same as the last setting and the temperature and air flow direction can be adjusted by user. The Running indicator will be flashed 10 times per 1 Hz frequency, then all the indicators turn OFF except the Sleep light after 5 min elapse. Those indicators will be recovery when the temperature or Time setting is adjusted, after the setting, the indicators will be lit in 10 sec, then turn OFF.

## • Automatic run (SMART) mode

When the appliance operates in Smart Mode, the air flow direction can be adjusted.

### 1 H/C appliance

- a. When the temperature setting is 26°C, the unit will run in Cool mode if the room temperature exceeds 26°C.
- b. When the room temperature exceeds 23°C, but is below 26°C, it will run in Dry mode.  
*(It will switch to Automatic setting after 3 min LOW air volume running.)*
- c. When the room temperature exceeds 21°C, but is below 23°C, it will run in Fan only mode, with the air volume set to LOW and fan speed can be adjusted.
- d. When room temperature is not more than 21°C, it will run in Heat mode, and the temperature is set to 22°C.

### 2 Cool only appliance

- a. When the room temperature exceeds 26°C, it will be ran in Cool mode, and the temperature is set to 26°C.
- b. When the room temperature exceeds 23°C, but not more than 26°C, it will be operated in the Dry mode.
- c. When the room temperature is not more than 23°C, it will be operated in the Fan only, the air volume set to LOW and the fan speed can be adjusted

After the appliance start the smart operation, the setting temperature can be adjusted 2°C or 7°C (based on the remote mode; min accuracy is 1°C) up and down base on the automatic temperature setting, also the presetting temperature of PCB circuit.

In case of the specific operation selected, it could be re-select the other modes after the compressor ceased for 5 min or the setting temperature changed.

---


## • Cooling-run mode

### Outdoor Fan Operation

The outdoor fan's speeds except the single speed motor can be changed according to outdoor ambient temperatures. When operating at a fixed frequency, the outdoor fan is forced to operate at the high speed.

### Indoor Fan Operation

- When the indoor fan keep in running condition, this operation state could be controlled by the remote control with High, Median, Low and Automatic setting.
- When the appliance is set Automatic condition in the Cool mode for the first time, the fan speed will run at Low setting. After that, temperature and fan speed is shown as following.

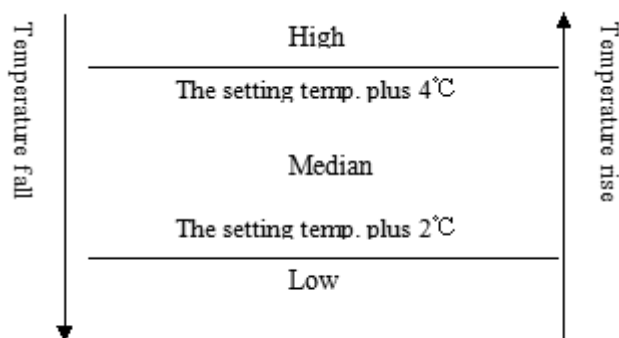

When the difference between setting temperature and room temperature equal 2°C or 4°C, indoor fan speed will remain steady.

### Air flow direction control

The louver is derived by a step motor, and it swings the horizontal louver automatically. Press the SWING button to swing or stop the louver.

During the louver swing in normal operation, the current position will be stored. When the appliance turn off and louver swing automatically to the default position, it will position at the close position plus 5°.

### 4-way valve

- State: It is interrupted in cooling.
- Switchover: When initially powered on for cooling, the 4-way valve is interrupted immediately.

When the heating is changed to the cooling, it needs an interval of 50 seconds for the 4-way valve to change over from being activated to being interrupted.

## • Heating-run mode

### Temperature compensation


The temperature compensation is 5° in heating mode. For example, if the set temperature is 25°C by the remote control, when the room temperature is detected with 31°C, the compressor will turn off. The main reason is that the hot air is condensed at the top of the house.

› *Note:* The compensation is available only if the room temperature sensor of indoor unit is used and it is not available when it is subject to the sensor on the remote control.

### Indoor fan motor operation

#### • Anti-cold air system:

When the appliance run in Heat mode condition, the indoor fan motor operation is shown as following to prevent the cooling air come out during the appliance operation.

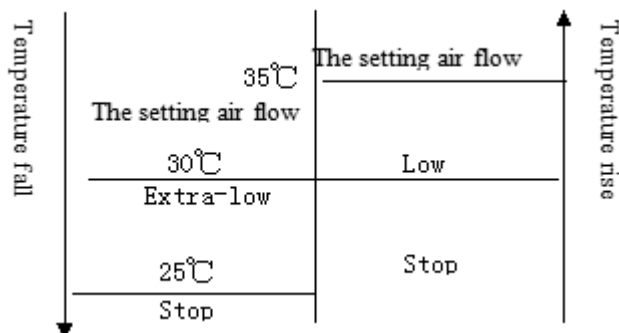


When the appliance turn in the anti-cold air system in the Extra-LOW (Tapped motor set in LOW, sic passim) during the compressor operation, the louver swing to the Cool air protection position, the louver recovers to the original position after the air volume change to LOW. When the room temperature reach to the setting temperature, the compressor will be turn off, and the air flow change to LOW, the louver swing to the Cool air protective position to prevent the air drop into human body directly; when the indoor pipe coil temperature drop continuously, it will turn in the Cooling air protective system in the Extra-LOW or stop the fan motor.

The indoor fan motor is only controlled by the signal of indoor pipe coil temperature, no matter the compressor turn ON/OFF, even the appliance turn in Heat mode at first time.

The indoor fan motor will operate according to the different setting(High, Median, Low and Automatic) by the remote control, but the anti-cold air system is prior.

When the appliance run in the Heat mode with the Automatic setting at first time, the fan speed will be in the LOW setting, and the operation diagram is shown as following

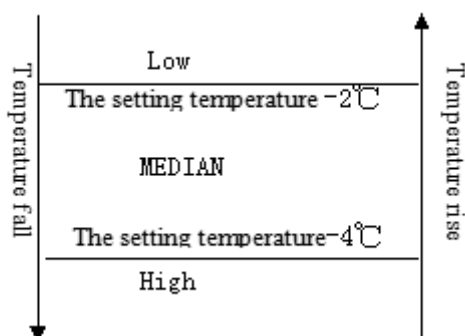

When the difference between the setting temperature and the room temperature equal to 2°C or 4°C, the indoor fan speed will keep in current speed.

#### Air flow direction control

The horizontal louver is controlled by a step motor, press the SWING button to swing or stop the louver.

During the louver run in normal operation, the current position will be stored. When the appliance turn off and louver swing automatically to the default position, it will position at the default position plus 5°.

#### Outdoor fan

The outdoor fan speeds except single speed motor can be changed according to outdoor ambient temperatures.

#### 4-way valve

• State: It is electrified in heating.

• Switchover: When initially powered on for heating, the 4-way valve is activated immediately.

In the change from cooling to heating, it needs an interval of 50 seconds for the 4-way valve to change over from being interrupted to being activated.


#### • **SUPER function mode (optional)**

In cooling mode, when you press the SUPER button on the remote, the unit will operate for 15 minutes with:

- The set temperature at 16°C; the fan set at highest speed; the compressor running at highest frequency.

#### • **Dehumidifying mode**

The dehumidifying mode is illustrated as follows:

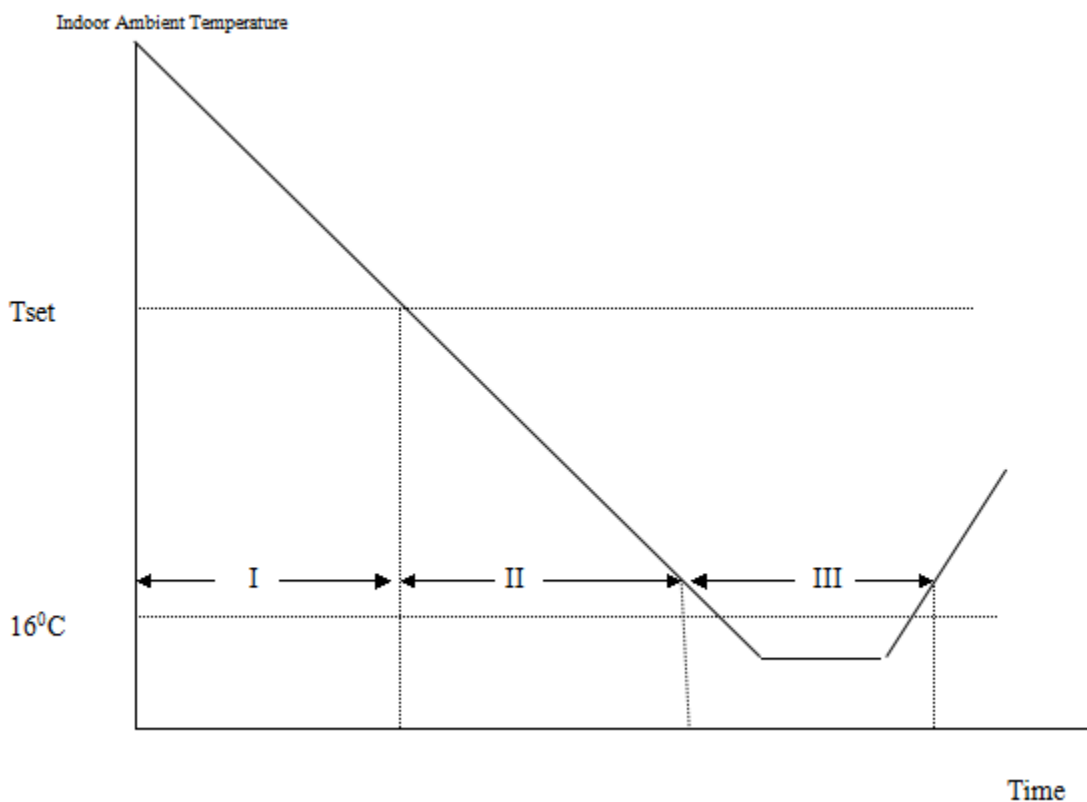

Dehumidifying area I: Operation at the frequency in the range (30–60Hz) according to  $Dt$  ( $T_{indoor\ ambient} - T_{set}$ ).

$Dt$ (°C)	$F$ (Hz)
0	30
0.5	30
1	40
1.5	50
$\geq 2$	60

Dehumidifying area II: The compressor stops for 5 minutes and operators for 5 minutes at the lowest frequency.

Dehumidifying area III: The compressor stops.

---

### • Fan Only Mode Operation

During the appliance run in this mode, the compressor and outdoor fan stop, the indoor fan operate under the pre-setting of air volume, and the louver swing, and the indoor fan speed same as the Heating Mode.

### 5-2.2 D Special Function Instructions

#### • Conditions of anti-freezing prohibition of frequency rising:

<sup>1</sup> *Condition 1:* in the case of anti-freezing frequency decreasing, the temperature of indoor heat exchanger rises to “anti-freezing frequency decreasing temperature”.

<sup>2</sup> *Condition 2:* in normal operation, the temperature of indoor heat exchanger reaches “anti-freezing prohibition of frequency rising temperature”.

If either of the above two conditions is met, the product will enter anti-freezing prohibition of frequency rising state. Anti-freezing prohibition of frequency rising operation: the compressor is kept at the current frequency, which may decrease according to situations while cannot rise. The outdoor fan runs.

• **Condition for the end of anti-freezing prohibition of frequency rising state:** when the temperature of indoor heat exchanger rises to “anti-freezing releasing temperature”, the state of anti-freezing prohibition of frequency rising is released.

#### • Conditions for defrosting:

A › When the heating compressor consecutively runs for 40 minutes (EEPROM setting value at the current operating mode);

B › If the ambient temperature minus the temperature of coiled pipe is equal to or higher than six degrees centigrade (EEPROM setting value in the current operating mode);

C › If the temperature of coiled pipe is equal to or lower than minus two degrees centigrade (EEPROM setting value in the current operating mode);

If the above three conditions are met simultaneously, defrosting begins.

#### • Defrosting actions:

The compressor stops, and the outdoor fan stops after delay of 30 seconds; in 50 seconds the four-way valve is power off; and in 10 seconds the compressor starts and runs at “defrosting frequency”.

Conditions for ending defrosting:

Defrosting is over if either of the below conditions is met.

A › The accumulated time of defrosting is longer than 12 minutes (EEPROM setting value in the current operating mode);

B › If the temperature of coiled pipe is equal to or higher than 14 degrees centigrade (EEPROM setting value in the current operating mode);

#### • Actions of exiting the defrosting state:


The compressor stops, and 50 seconds later the four-way valve opens, and another 10 seconds later the compressor and outdoor fan restart and begin normal operation.

## 6. Electrical Characteristics

### 6-1. Print Circuit Board (Indoor & Outdoor)

#### ***Models of Indoor Unit:***


AS-09TR3SVDDH | AS-09UR3SVDDH | AS-12TR3SVEDH | AS-12UR3SVEDH | AS-18TR3SXADH | AS-18UR3SXADH |  
AS-09TR3SVEDC | AS-09UR3SVEDC | AS-12TR3SXEDC | AS-12UR3SXEDC

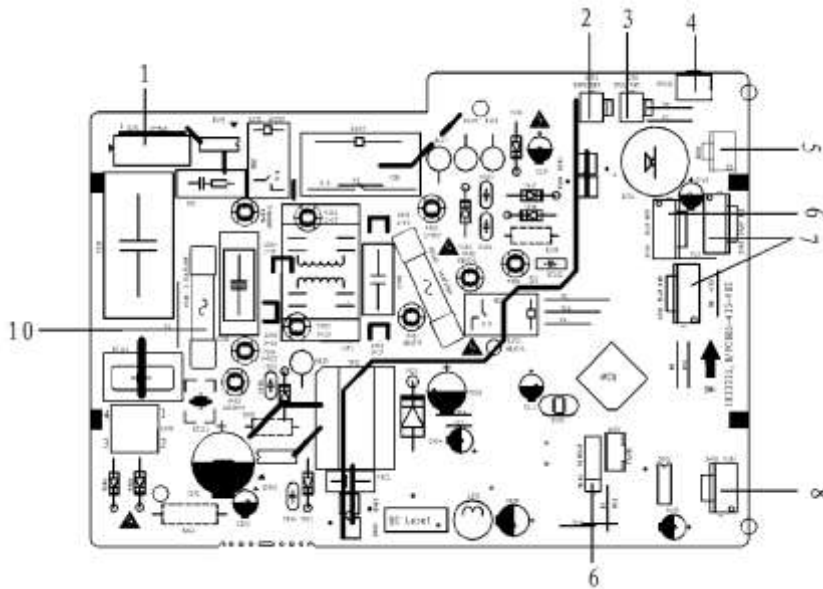


1	Interface of PG motor
2	Room temperature sensor
3	Pipe temperature sensor
4	Switch button
5	Feedback from PG motor
6	Up & down swing
7	Left & right swing
8	Wiring control or wifi interface
9	Display interface
10	Protective tube

AS-24TR3SBBDH | AS-24UR3SBBDH | AS-18TR3SBBDC | AS-18UR3SBBDC | AS-24TR3SDBDC | AS-24UR3SDBDC

1	Interface of PG motor
2	Room temperature sensor
3	Pipe temperature sensor
4	Switch button
6	Up & down swing
7	Left & right swing
8	Display interface
9	Protective tube

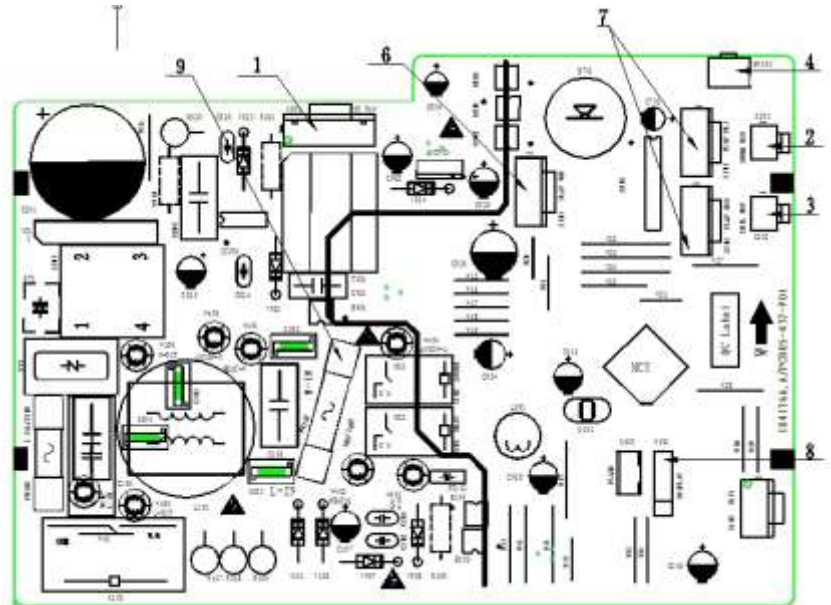


1	Interface of PG motor
2	Room/and Pipe temperature sensor
4	Switch button
6	swing
9	Protective tube

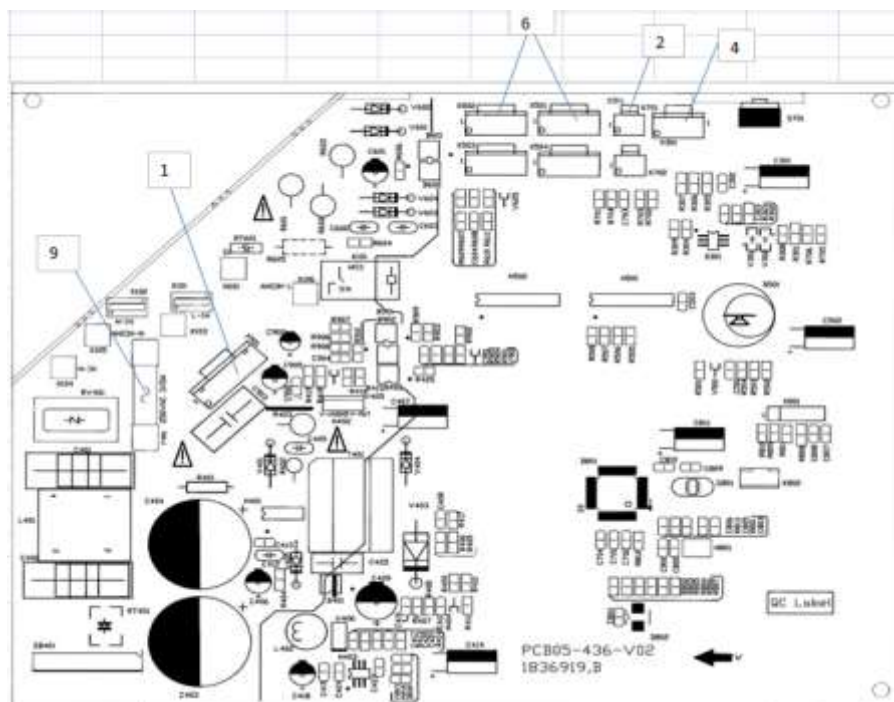


### Models of Outdoor Unit:

AS-09TR3SVDDH | AS-09UR3SVDDH | AS-12TR3SVEDH | AS-12UR3SVEDH | AS-09TR3SVEDC | AS-09UR3SVEDC

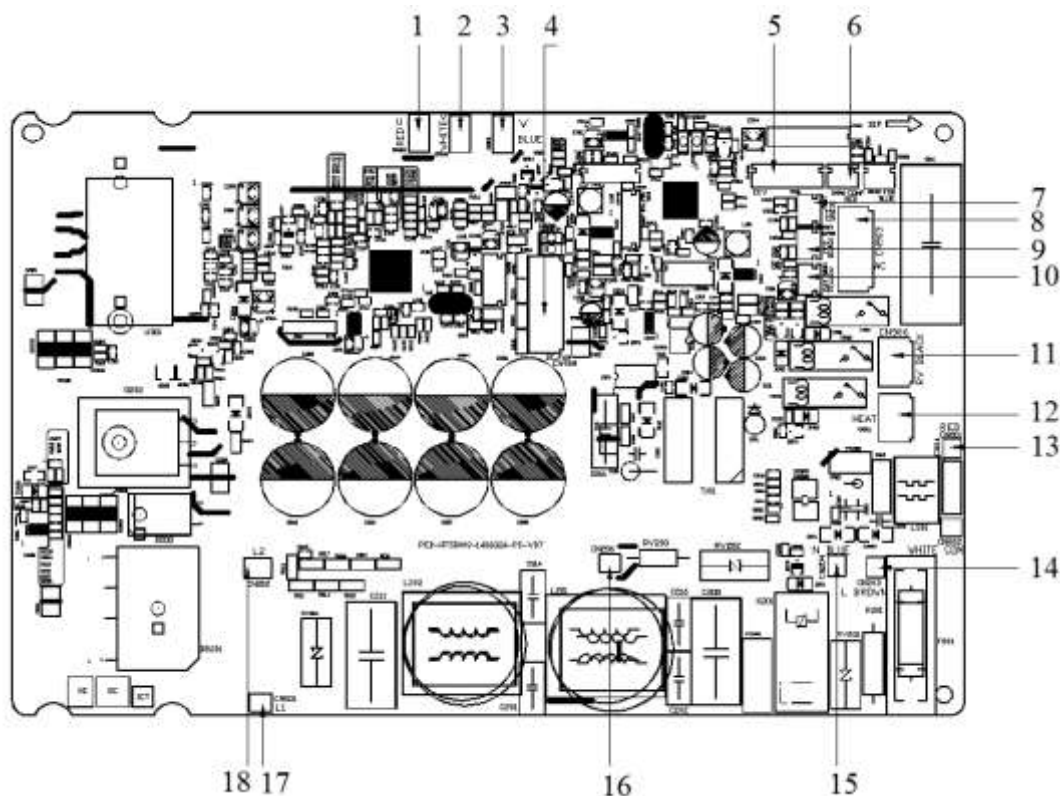


1	Terminal of compressor U phase	10	Outdoor ambient temperature sensor
2	Terminal of compressor V phase	11	Terminal of 4-way valve
3	Terminal of compressor W phase	12	Terminal of heater
4	Terminal of DC fan	13	Communication wire to terminal block
5	Terminal of electronic expansion valve	14	Terminal of neutral wire to terminal block
6	Terminal of compressor overload protector	15	Terminal of live wire to terminal block
7	Compressor discharge temperature sensor	16	Terminal of ground wire
8	Terminal of AC fan	17	Terminal of reactor
9	Outdoor pipe temperature sensor	18	Terminal of reactor

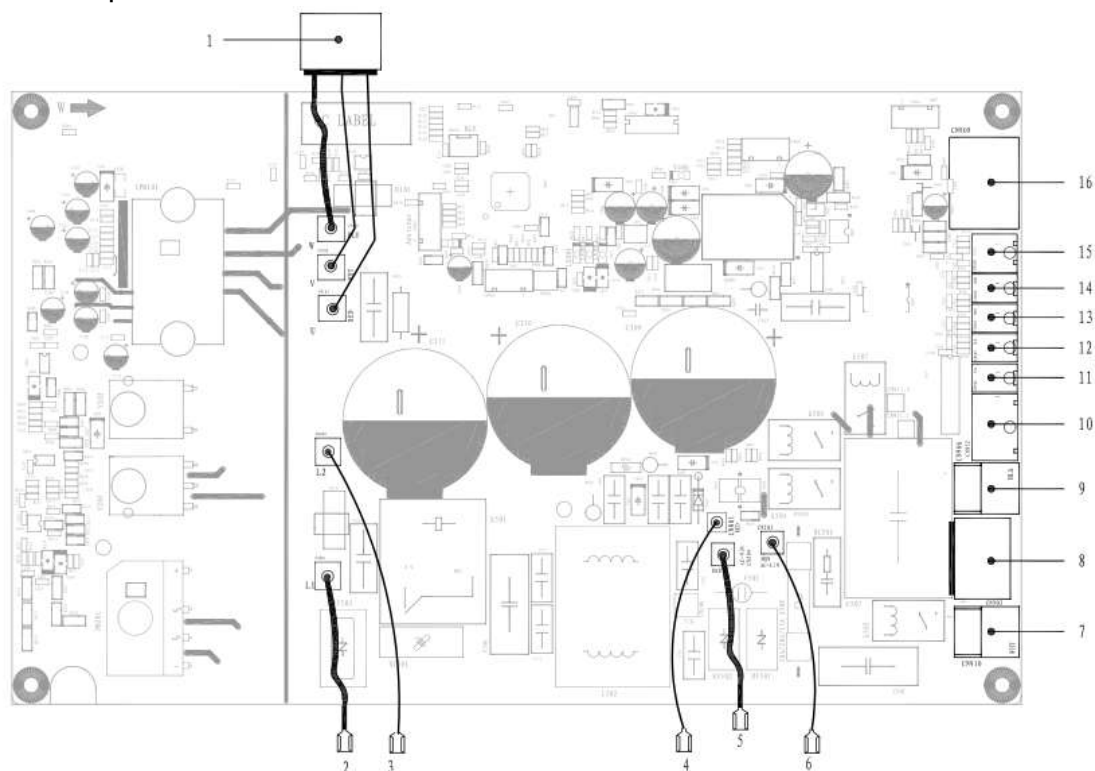

1	Terminal of compressor U/V/W phase	5	Terminal of neutral wire,connect to the terminal panel "1(N)"	9	4-way valve terminal	13	Compressor discharge temperature sensor
2	Terminal of reactor	6	Terminal of live wire,connect to the terminal panel "2(L)"	10	Terminal of electronic expansion valve	14	Terminal of compressor overload protector
3	Terminal of reactor	7	cool valve terminal	11	Outdoor ambient temperature sensor	15	Over pressure sensor
4	Terminal of signal wire,connect to the terminal panel "3(SI)"	8	Terminal of AC fan	12	Outdoor pipe temperature sensor	16	Terminal of DC fan





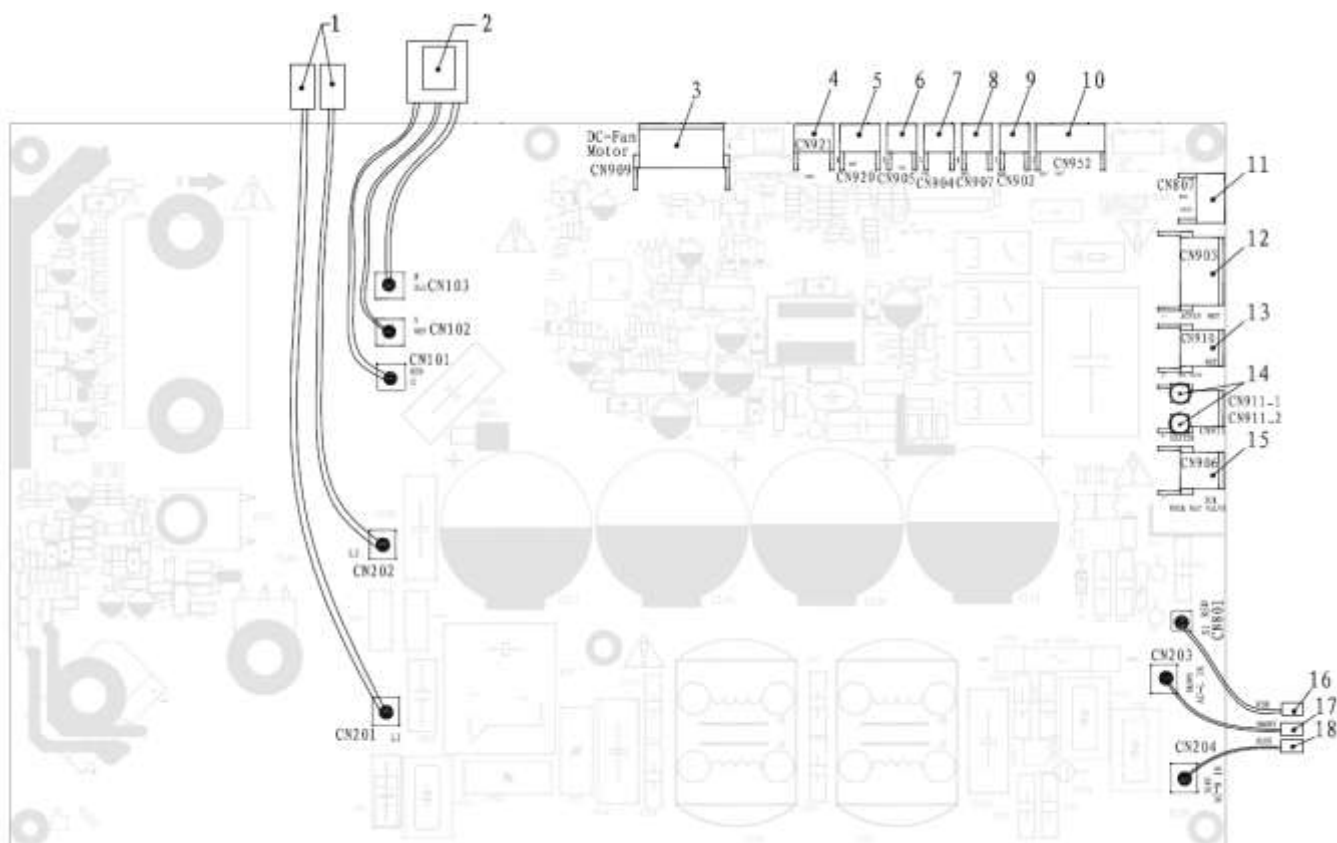

1	Terminal of reactor	6	Compressor discharge temperature sensor	11	DRED Function	16	Terminal of communication wire
2	Terminal of compressor	7	Outdoor ambient temperature sensor	12	Terminal of AC fan	17	Terminal of live wire
3	Terminal of DC fan	8	Outdoor pipe temperature sensor	13	Cool Valve terminal	18	Terminal of neutral
4	Heat Sink temperature sensor	9	Terminal of compressor overload protector	14	Heater terminal		
5	PressureProtector	10	Terminal of electronic expansion valve	15	4-way valve terminal		

## 6-2. Fan Motor

### 6-2.1 DIAGRAMS

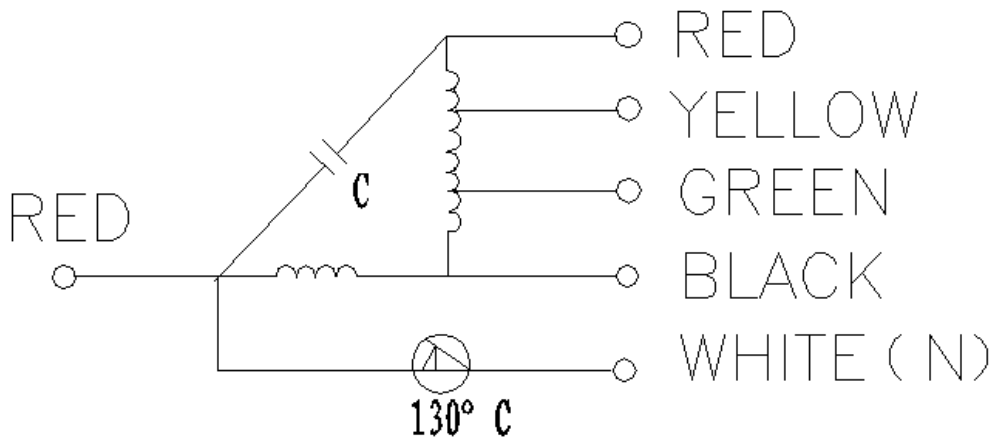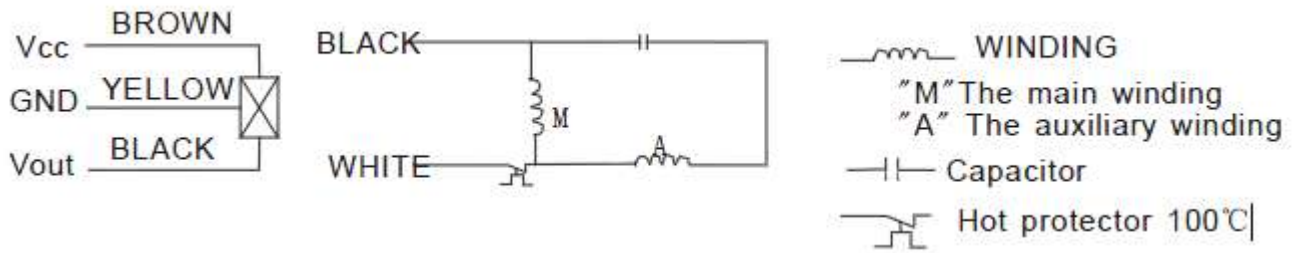

#### Test resistance


**TOOL:** Multimeter.

- Test the resistance of the main winding.
- The indoor fan motor is fault if the resistance of main winding is 0 (short circuit) or  $\infty$  (open circuit).

#### Test voltage

**TOOL:** Multimeter.


- Insert screwdriver into to rotate indoor fan motor slowly for 1 revolution or over, and measure voltage "YELLOW" and "GND" on motor. The voltage repeat 0V DC and 5V DC.

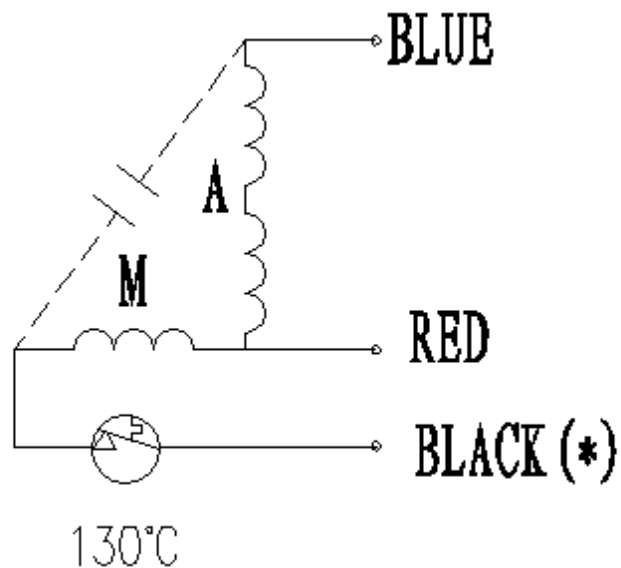

#### » Notes:


1. Please do not hold motor by lead wires.
2. Please do not plug IN/OUT the motor connector while power ON.
3. Please do not drop, hurl, or dump motor against hard material. Malfunction may not be observed at early stage after such shock. But it may be found later, this type of mishandling void our warranty.

### 6-2.2 Indoor DC Fan Motor

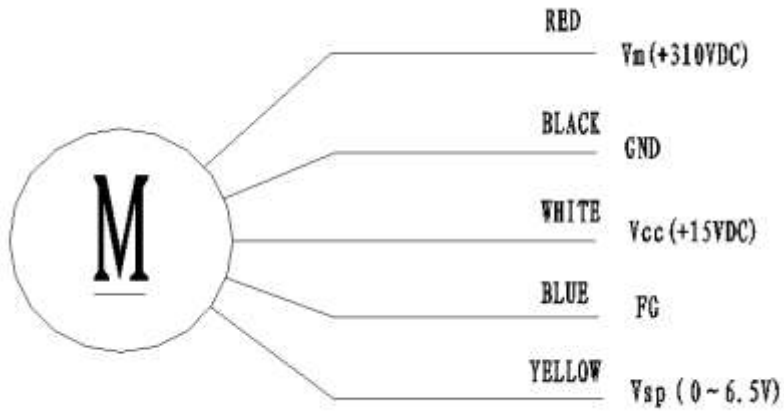

1	RED	$V_m(+310VDC)$
2	—	—
3	—	—
4	BLACK	GND
5	WHITE	$V_{cc}(+15VDC)$
6	BLUE	FG
7	YELLOW	$V_{sp} (0 \sim 6.5V)$

### 6-2.3 Outdoor DC Fan Motor

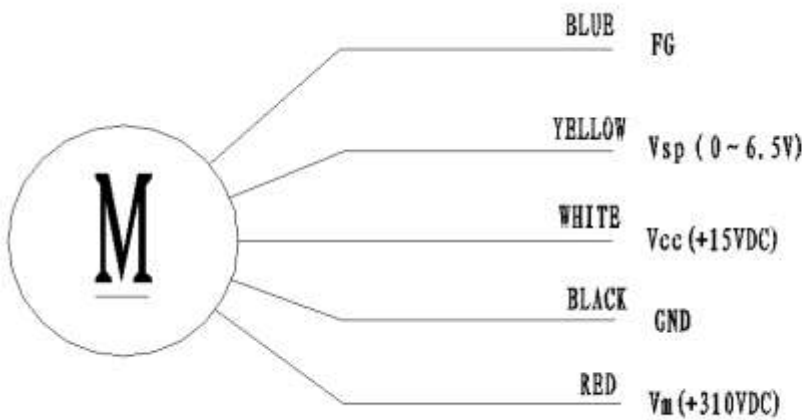

1	BLUE	FG
2	YELLOW	$V_{sp} (0 \sim 6.5V)$
3	WHITE	$V_{cc}(+15VDC)$
4	BLACK	GND
5	—	—
6	RED	$V_m(+310VDC)$

### 6-3. Temperature Sensor

**Parameter table below:**

- THE PARAMETER OF THE INDOOR COIL AND INDOOR ROOM SENSOR;
  - THE PARAMETER OF THE OUTDOOR COIL AND OUTDOOR SENSOR;
- (R(0)=15k B(0/100)=3450)

Temperature(°C)	Resistance(k)	Voltage(V)		Temperature(°C)	Resistance(k)	Voltage(V)
-20	38.757	0.58143512		31	4.292	2.715076661
-19	36.844	0.60795346		32	4.137	2.76063657
-18	35.038	0.63530819		33	3.989	2.805589174
-17	33.331	0.66352684		34	3.847	2.850117358
-16	31.719	0.69257720		35	3.711	2.894109636
-15	30.196	0.72246147		36	3.58	2.937788018
-14	28.755	0.75321223		37	3.455	2.980713033
-13	27.392	0.78480857		38	3.335	3.023117961
-12	26.103	0.81722911		39	3.219	3.065272268
-11	24.882	0.85051031		40	3.108	3.106725146
-10	23.727	0.88458737		41	3.001	3.147759536
-9	22.632	0.91951536		42	2.899	3.187898487
-8	21.594	0.95527085		43	2.801	3.227439565
-7	20.611	0.99179340		44	2.706	3.266717909
-6	19.678	1.02913875		45	2.615	3.305249514
-5	18.794	1.06721353		46	2.528	3.342947037
-4	17.954	1.10609872		47	2.444	3.380169671
-3	17.158	1.14565549		48	2.363	3.416856492
-2	16.401	1.18599135		49	2.286	3.45247766
-1	15.683	1.22696435		50	2.211	3.487894953
0	15	1.26865672		51	2.139	3.522585993
1	14.351	1.31098658		52	2.07	3.556485356
2	13.734	1.35393437		53	2.003	3.590032381
3	13.148	1.39741342		54	1.939	3.622673675
4	12.589	1.44157386		55	1.877	3.654865988
5	12.058	1.48618720		56	1.818	3.686036427
6	11.553	1.53125563		57	1.76	3.717201166
7	11.071	1.57689691		58	1.705	3.747244673
8	10.613	1.62286005		59	1.652	3.776658768
9	10.176	1.66928515		60	1.6	3.805970149
10	9.76	1.71601615		61	1.551	3.834009923
11	9.363	1.76311968		62	1.503	3.861880963
12	8.985	1.81043663		63	1.457	3.888973616
13	8.624	1.85805887		64	1.413	3.91524643
14	8.279	1.90597205		65	1.37	3.941267388
15	7.951	1.95387327		66	1.328	3.967019291
16	7.637	2.00204130		67	1.289	3.991234935
17	7.337	2.05033368		68	1.25	4.015748031
18	7.051	2.09859271		69	1.213	4.039284017
19	6.778	2.14682606		70	1.177	4.062450215
20	6.516	2.19524793		71	1.142	4.085229093
21	6.267	2.24333597		72	1.109	4.106941536
22	6.028	2.29151689		73	1.076	4.12888601

23	5.8	2.33944954		74	1.045	4.149715216
24	5.581	2.38741691		75	1.015	4.17007359
25	5.372	2.43506494		76	0.986	4.189944134
26	5.172	2.48247664		77	0.957	4.210004953
27	4.981	2.52951096		78	0.93	4.228855721
28	4.797	2.57653834		79	0.904	4.247168554
29	4.622	2.62291710		80	0.878	4.265640683
30	4.453	2.66931854				

**Note: the AD value in the table is calculated on the basis of the pull-down resistor is 5.1K.**

**• THE PARAMETER OF OUTDOOR COMPRESSOR TEMPERATURE SENSOR:**


R(0)=187.25k B(0100)=3979)						
Temperature (°C)	Resistance(k)	Voltage(V)		Temperature (°C)	Resistance (k)	Voltage(V)
-20	542.867	0.06185563		51	19.907	1.273074475
-19	512.839	0.06543004		52	19.148	1.310312934
-18	484.672	0.06917993		53	18.422	1.348029498
-17	458.239	0.07311215		54	17.728	1.386170907
-16	433.423	0.07723358		55	17.065	1.424680494
-15	410.115	0.08155140		56	16.43	1.463624623
-14	388.213	0.08607312		57	15.822	1.502961719
-13	367.625	0.09080590		58	15.241	1.542579738
-12	348.264	0.09575738		59	14.684	1.582573078
-11	330.048	0.10093573		60	14.151	1.622834232
-10	312.904	0.10634837		61	13.64	1.663405088
-9	296.761	0.11200385		62	13.151	1.704175229
-8	281.556	0.11790981		63	12.682	1.745200698
-7	267.227	0.12407536		64	12.233	1.78637104
-6	253.72	0.13050821		65	11.802	1.827760456
-5	240.982	0.13721739		66	11.388	1.869364416
-4	228.965	0.14421140		67	10.992	1.910971223
-3	217.624	0.15149895		68	10.611	1.952788467
-2	206.917	0.15908889		69	10.246	1.994602839
-1	196.805	0.16699001		70	9.896	2.036415908
0	187.25	0.17521257		71	9.559	2.078366648
1	177.957	0.18402550		72	9.236	2.120229484
2	169.186	0.19319719		73	8.925	2.162162162
3	160.903	0.20273937		74	8.627	2.203928178
4	153.179	0.21252789		75	8.341	2.245558418
5	145.685	0.22297275		76	8.065	2.287251934
6	138.696	0.23368340		77	7.8	2.328767123
7	132.086	0.24480509		78	7.546	2.369998606
8	125.833	0.25634646		79	7.301	2.411176512
9	119.916	0.26831655		80	7.065	2.452217815
10	114.315	0.28072493		81	6.843	2.492120501
11	109.01	0.29358432		82	6.624	2.532777116
12	103.984	0.30690352		83	6.414	2.573028606

13	99.222	0.32068816		84	6.212	2.612972641
14	94.708	0.33494897		85	6.017	2.652726847
15	90.427	0.34969710		86	5.829	2.692216328
16	86.366	0.36494000		87	5.648	2.731362468
17	82.512	0.38068793		88	5.474	2.770083102
18	78.854	0.39694585		89	5.306	2.808524698
19	75.381	0.41372093		90	5.144	2.846617549
20	72.082	0.43102355		91	4.988	2.884289108
21	68.948	0.44885674		92	4.837	2.921715219
22	65.968	0.46723835		93	4.692	2.958579882
23	63.136	0.48615877		94	4.552	2.995066949
24	60.443	0.50562884		95	4.417	3.031113488
25	57.88	0.52566481		96	4.286	3.066931265
26	55.367	0.54691396		97	4.161	3.10190676
27	52.978	0.56877112		98	4.039	3.13682074
28	50.707	0.59123237		99	3.922	3.171050177
29	48.547	0.61430611		100	3.776	3.214826021
30	46.492	0.63799445		101	3.703	3.237170332
31	44.537	0.66229036		102	3.602	3.268602192
32	42.676	0.68720188		103	3.501	3.300650422
33	40.904	0.71272849		104	3.409	3.33039475
34	39.217	0.73885738		105	3.317	3.360680043
35	37.609	0.76561057		106	3.228	3.390506582
36	36.077	0.79296593		107	3.141	3.420179056
37	34.616	0.82093877		108	3.058	3.448975451
38	33.224	0.84949031		109	2.977	3.477549351
39	31.895	0.87866649		110	2.899	3.505516033
40	30.628	0.90841082		111	2.823	3.533201704
41	29.419	0.93873381		112	2.749	3.56058226
42	28.264	0.96965549		113	2.678	3.587254695
43	27.162	1.00111890		114	2.609	3.613561484
44	26.109	1.03315203		115	2.542	3.639477628
45	25.103	1.06573050		116	2.477	3.664977902
46	24.142	1.09883007		117	2.414	3.6900369
47	23.223	1.13246511		118	2.353	3.714629083
48	22.345	1.16658089		119	2.294	3.738728832
49	21.505	1.20120120		120	2.237	3.762310501
50	20.701	1.23631868				

**Note: the AD value in the table is calculated on the basis of the pull-down resistor is 6.8K.**

## 6-4. Compressor

### DIAGRAMS

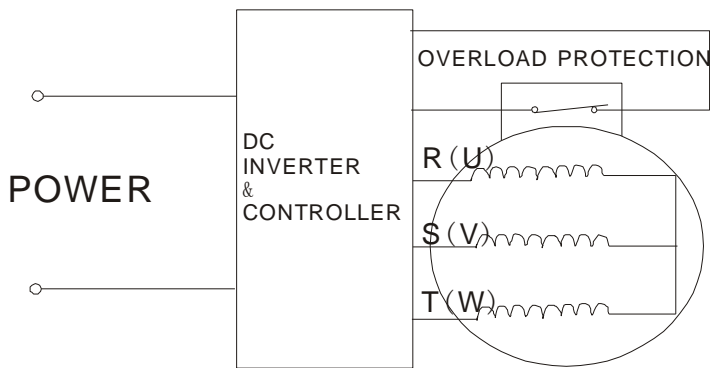

#### Test resistance

**TOOL:** Multimeter.

- Test the resistance of the winding.
- The compressor is faulty if the resistance of main is 0 (short circuit) or  $\infty$  (open circuit).

#### Common Problems:


1. Compressor motor lock.
2. Discharge pressure value approaches static pressure value.
3. Compressor motor winding abnormality.

#### » Notes

- Don't put a compressor on its side or turn over.
- Please assemble the compressor in your air conditioner rapidly after removing the plugs.
- Don't leave the compressor in open air for a long time.
- Avoiding compressor running in reverse caused by connecting electrical wire incorrectly.
- **Warning!** In case AC voltage is impressed to compressor, the compressor performance will drop because of its rotor magnetic force decreasing.

## 6-5. Electric Reactor

### DIAGRAM

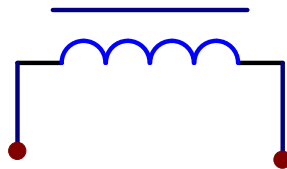

#### Common Problems:

1. Sound abnormality
2. Insulation resistance disqualification.

## 7. Troubleshooting

### 7-1. Error Code Tables

#### 7-1.1 Indications on the Outdoor Unit:

When the unit has the following trouble and the compressor stops running, the LED of outdoor control board will show the error sequence automatically:

» NOTE:      ★: LED LIT SOLID      O: LED FLASHING      ×: LED OFF

Error code #	Outdoor Failure Description	LED1	LED2	LED3	Root cause may be one of the following:
» Note: lights will flash every second for the following faults					
	Normal	×	×	×	
	Outdoor coil temperature sensor in trouble	★	×	★	a.the outdoor coil sensor connect loose; b.the outdoor coil temperature sensor is failure; c.the outdoor control board is failure
	Compressor exhaust temperature sensor in trouble	★	×	×	a.the compressor exhaust temperature sensor connect loose; b.the compressor exhaust temperature sensor is failure; c.the outdoor control board is failure
	Communication failure between the indoor unit and outdoor unit	×	×	×	a.the communication cable connect loose; b.the communication cable is failure; c.the connection between the filter board and the outdoor control board is incorrect or loose; d.the connection between the filter board and the terminal is incorrect or loose e.the indoor control board is failure; f.the PFC board is failure; g.the power board is failure; h.the outdoor control board is failure.
	Current overload protection	★	×	×	a.the fan motor run abnormally; b.the condensor and evaporator is dirty; c.the air inlet and outlet is abnormally
	Maximum current protection	★	×	★	a.the outdoor control board is short circuit; b.the drive board is short circuit; c.the other components is short circuit
	Communication trouble between outdoor unit and driver	×	★	★	a. the connection wires connect loose b.the outdoor board or drive board is failure;



	Outdoor EEPROM in trouble	★	★	★	a.the EEPROM chip is loose; b.the EEPROM chip inserted with opposite direction; c.the EEPROM chip is failure
	Compressor exhaust temperature too high protection	×	×	★	a.the compressor exhaust temperature sensor is failure; b.the refrigerant of the unit is not enough
	Outdoor ambient temperature sensor in trouble	★	★	×	a.the outdoor ambient temperature sensor connect loose; b.the outdoor ambient temperature sensor is failure; c.the outdoor control board is failure
	Compressor shell temperature too high protection	×	★	×	a.the compressor exhaust temperature sensor connect loose b.the refrigerant of the unit is not enough
	Anti-freeze protection with cooling or overload protection with heating in indoor unit	×	×	×	a.the indoor coil temperature sensor connect loose; b.the indoor coil temperature sensor is failure c.the indoor control board is failure d. the refrigerant system is abnormal.
	Compressor drive in trouble	×	×	×	a.the outdoor drive board is failure; b.the compressor is failure c. the outdoor control board is failure
	Outdoor fan motor locked rotor protection	×	×	★	a.the connection of the outdoor fan motor is loose; b.there are something block the outdoor fan; c.the fan motor is failure; d.the outdoor control board is failure
	Outdoor coil anti-overload protection with cooling	×	★	×	a.the refrigerant is too much; b.the outdoor fan motor is failure; c.the outdoor fan is broken; d.the condensor is dirty; e.the air inlet and air outlet of the indoor unit and the outdoor unit is not normally

	IPM module protection	×	×	×	<b>a.</b> The IPM board is failure; <b>b.</b> The outdoor fan is broken; <b>c.</b> The outdoor fan motor is failure; <b>d.</b> The outdoor fan has been blocked ; <b>e.</b> The condenser is dirty; <b>f.</b> The outdoor unit has been installed without standard.
	PFC protection	×	×	×	<b>a.</b> the PFC is failure; <b>b.</b> the outdoor drive board is failure
	Compressor pre heating process	×	★	×	it is normal mode in cold weather
	Chip in outdoor board in trouble	★	×	×	<b>a.</b> Using the wrong drive board; <b>b.</b> Using the wrong compressor.
	AC voltage higher or lower protection	★	★	×	<b>a.</b> the supply voltage is higher or lower than normal; <b>b.</b> the inner supply voltage of the unit is higher or lower than normal
	DC compressor start failure	×	×	×	<b>a.</b> the outdoor drive board is failure; <b>b.</b> the compressor is failure
	Outdoor ambient temperature too low protection	★	×	×	<b>a.</b> Outdoor ambient temperature too low
<b>» Note: the lights flash every two seconds for the following faults</b>					
	Protection against overheated outdoor radiator	O	×	×	<b>a.</b> Radiator sensors fail <b>b.</b> Detection circuit of the sensor on the control panel fails
	Protection of the system against too high pressure	O	O	×	<b>a.</b> The pressure switch fails <b>b.</b> The pressure detection switch on the control panel fails <b>c.</b> The measured value of the system pressure exceeds the limit

**When the compressor is in operation:**

★: Light O: Flashing ×: Off —flash cycle is 1 second				
No.	LED1	LED2	LED3	Reasons for the current operating frequency of the compressor is limited
1	O	O	O	Normal frequency rising and decreasing, no limitation
2	×	×	★	Frequency decreasing or prohibition of frequency rising caused by over-current
3	×	★	★	Frequency decreasing or prohibition of frequency rising caused by anti-freezing of refrigeration or anti-overload in heating
4	★	×	★	Frequency decreasing or prohibition of frequency rising caused by too high compressor discharge temperature
5				Limit to the max operating frequency caused by too low power voltage

6	★	★	★	Operation at fixed frequency (in the case of capability measuring or compulsory operation at fixed frequency)
7	O	×	×	Protective frequency decreasing against outdoor overload (overpower, over frequency conversion rate, over torque, detection of DC under-voltage)
8	★	×	×	Frequency decreasing caused by indoor and outdoor communication fault
9	×	★	O	Frequency decreasing or prohibition of frequency rising protection against overload of outdoor coiled pipe
10	×	★	×	Frequency decreasing or prohibition of frequency rising for power-saving when it is being used simultaneously with other appliances

### 7-1.2. Indications on the indoor unit:

#### 7-1.2 A

The 7-segment tube of the indoor display board will show an error code automatically when the unit has the following trouble:

Error code	Power	Timer	Running	Sleep	★: Lit solid    o: Flashing    x: OFF		
	1	2	3	4	Content	Remark	Root cause may be one of the following:
EA					Error code will display when the communication between display board and control board have in trouble		<b>a.</b> The connection between the display board and control board is loose; <b>b.</b> The indoor control board is failure. <b>c.</b> The wiring of the display board is failure.

#### 7-1.2 B

When the unit has the following trouble and the compressor stops running, press the sleep button on the remote controller for 4 times in ten seconds and the 7-segment tube of the display board will show the error code as the following, if two malfunction happened at the same time, it need press the sleep button for 4 times again, the LED will show the other error code.

Refer to the remote controller which the sleep key can set into 4 different combination ways, when using to check the error codes only takes effect for pressing the sleep key 10 times in ten seconds instead of 4 times.

» **NOTE:** If the troubleshooting inquiry display by 7-segment tube, then the error code will be displayed, otherwise only the LED of the display board can show.

Error Code	Running	Timer	Sleep	Power	Remark: ★Light    o Flash    x OFF		
	1	2	3	4	Content	Remark	Root cause may be one of the following:
0					Normal		

1	x	o	x	x	The failure for temperature sensor of outdoor coil		<b>a.</b> outdoor temperature sensor loose; <b>b.</b> outdoor temperature sensor failure; <b>c.</b> indoor control board failure
2	×	O	★	×	Compressor exhaust temperature sensor in trouble		<b>a.</b> compressor exhaust temperature sensor connection is loose; <b>b.</b> compressor exhaust temperature sensor failure; <b>c.</b> outdoor control board failure
5	★	O	×	×	IPM module protection		<b>a.</b> IPM board failure; <b>b.</b> outdoor fan broken; <b>c.</b> outdoor fan motor failure; <b>d.</b> outdoor fan blocked; <b>e.</b> condenser is dirty; <b>f.</b> outdoor unit has been installed incorrectly.
6	★	O	×	★	AC voltage higher or lower protection		<b>a.</b> supply voltage is higher or lower than normal; <b>b.</b> inner supply voltage of the unit is higher or lower than normal
7	★	O	★	×	Communication failure between the indoor unit and outdoor unit		<b>a.</b> communication cable connection loose; <b>b.</b> communication cable failure; <b>c.</b> connection between filter board and outdoor control board is incorrect or loose; <b>d.</b> connection between filter board and terminal is incorrect or loose; <b>e.</b> indoor control board failure; <b>f.</b> PFC board failure; <b>g.</b> power board failure; <b>h.</b> outdoor control board failure.
8	★	O	★	★	Current overload protection		<b>a.</b> fan motor runs abnormal; <b>b.</b> condenser and evaporator are dirty; <b>c.</b> air inlet and/or outlet abnormal
9	×	×	O	×	Maximum current protection		<b>a.</b> outdoor control board short circuited; <b>b.</b> drive board short circuited; <b>c.</b> other component(s) short circuited
10	×	×	O	★	Communication trouble between outdoor unit and driver		<b>a.</b> connection wire connection loose <b>b.</b> outdoor board or drive board failure
11	×	★	O	×	Outdoor EEPROM in trouble		<b>a.</b> EEPROM chip is loose; <b>b.</b> EEPROM chip inserted in opposite direction;

							<b>c.</b> EEPROM chip failure
<b>12</b>	×	★	O	★	Outdoor ambient temperature too low protection		Outdoor ambient temperature too low
<b>13</b>	★	×	O	×	Compressor exhaust temperature too high protection		<b>a.</b> compressor exhaust temperature sensor failure; <b>b.</b> insufficient refrigerant in unit
<b>14</b>	★	×	O	★	Outdoor ambient temperature sensor in trouble		<b>a.</b> outdoor ambient temperature sensor connection loose; <b>b.</b> outdoor ambient temperature sensor failure; <b>c.</b> outdoor control board failure
<b>15</b>	★	★	O	×	Compressor shell temperature too high protection		<b>a.</b> compressor exhaust temperature sensor connection loose <b>b.</b> insufficient refrigerant in unit
<b>16</b>					Anti-freeze protection with cooling or overload protection with heating in		<b>a.</b> indoor coil temperature sensor connection loose; <b>b.</b> indoor coil temperature sensor failure; <b>c.</b> indoor control board failure <b>d.</b> refrigerant system abnormal
<b>17</b>					PFC protection		<b>a.</b> PFC failure; <b>b.</b> outdoor drive board failure
<b>18</b>					DC compressor start failure		<b>a.</b> outdoor drive board failure; <b>b.</b> compressor failure
<b>19</b>	×	×	×	O	Compressor drive in trouble		<b>a.</b> outdoor drive board failure; <b>b.</b> compressor failure <b>c.</b> outdoor control board failure
<b>20</b>	★	×	×	O	Outdoor fan motor locked rotor protection		<b>a.</b> outdoor fan motor connection is loose; <b>b.</b> outdoor fan blockage; <b>c.</b> fan motor failure; <b>d.</b> outdoor control board failure
<b>21</b>					Outdoor coil anti-overload protection with cooling		<b>a.</b> too much refrigerant; <b>b.</b> outdoor fan motor failure; <b>c.</b> outdoor fan broken; <b>d.</b> condensor is dirty; <b>e.</b> air inlet and/or outlet of indoor unit and/or outdoor unit abnormal
<b>22</b>					Compressor pre heating process		it is normal mode in cold weather

24					Chip in outdoor board in trouble		<b>a.</b> Using the wrong drive board; <b>b.</b> Using the wrong compressor.
26					Overheated outdoor radiator		<b>a.</b> Radiator sensor failure <b>b.</b> Control panel detection circuit sensor failure
27					Protection against too high system pressure		<b>a.</b> pressure switch failure <b>b.</b> pressure detection switch on control panel failure <b>c.</b> measured system pressure value above limit
33	o	x	x	★	The failure for temperature sensor of indoor room		<b>a.</b> indoor room temperature sensor loose; <b>b.</b> indoor room temperature sensor failure; <b>c.</b> indoor control board failure.
34	o	x	★	x	The failure for temperature sensor of indoor coil temperature		<b>a.</b> indoor coil temperature sensor loose; <b>b.</b> indoor coil temperature sensor failure; <b>c.</b> indoor control board failure
36	O	★	×	★	Communication failure between the indoor unit and outdoor unit		<b>a.</b> communication cable loose; <b>b.</b> communication cable failure; <b>c.</b> connection between filter board and outdoor control board incorrect or loose; <b>d.</b> connection between filter board and terminal incorrect or loose; <b>e.</b> indoor control board failure; <b>f.</b> PFC board failure; <b>g.</b> power board failure; <b>h.</b> outdoor control board failure.
38	o	★	★	★	Indoor EEPROM failure		<b>a.</b> EEPROM chip loose; <b>b.</b> indoor control board failure
39	o	x	★	★	Indoor fan motor run abnormally		<b>a.</b> possible indoor fan motor blockage; <b>b.</b> fan motor cord connection loose; <b>c.</b> fan motor failure; <b>d.</b> indoor control board failure
41	★	★	o	★	The failure for Indoor grounding protective		Indoor control board failure

The failure is detected when the room temperature sensor broken or shorted over 5 sec.

The failure is detected when the temperature sensor of heater exchange broken or shorted over 5 sec.

The failure is detected when each setting data is not match after the EEPROM self-check two times.

The failure is occur when the grounding signal is not detected after the appliance power ON.

## 7-2. Testing the jumper terminals

### » Note:

When the whole machine is powered up, if the external unit does not work, to rule out the communications failures, adopt screening method such as short circuit on the jumper terminals to see if the external unit can be started normally or similar method.



There are two blue terminals on the outdoor control panel, as shown above.

Application: Short out the terminals, and power up the outdoor unit, then the outdoor unit may run independently. It can be determined that there is no internal and external communication faults.

## 7-3. Automatic Protection System Diagnosis and Troubleshooting

· Protection diagnosis of the complete machine - *(all types of protection during operation, i.e. under-voltage, over-voltage and overcurrent protection)*

» **Note:** List all types of protection that may occur to the complete machine and describe the conditions and signs of the start, course and end of such protection.

### 7-3.1 Voltage protection

#### › Protection against AC input over-voltage/under-voltage

- 1 • Conditions for protection against AC input over-voltage/under-voltage:
  - If the input AC voltage is greater than “protective over-voltage value” or less than “protective under-voltage value” for five seconds, over-voltage/under-voltage protection starts.
- 2 • Protection actions against AC input over-voltage/under-voltage:
  - The system stops operation.
- 3 • Conditions for ending AC input over-voltage/under-voltage:
  - If the input AC voltage is lower than “the protective over-voltage value” -10V, or higher than “the protective under-voltage value” +10V, the over-voltage/under-voltage protection will be released.

### 7-3.2 Current protection:

#### › Protection against over-current

- 1 • Conditions for over-current protection:
  - If the current is equal to or greater than “current value for starting the refrigeration current protection (E2 value)” for six seconds, over-current protection starts.
- 2 • Protection actions against over-current:
  - Indoor display screen and outdoor indicator give indications, the compressor and outdoor fan stop, but indoor fan runs normally.
- 3 • Condition for ending over-current protection:
  - When the current drops below “current value for releasing the refrigeration current protection (E2 value)”, over-current protection will be released.

#### › Frequency decreasing for over-current

- 1 • Conditions for over-current frequency decreasing:
  - If the current is equal to or greater than “current value for starting the refrigeration current protective frequency decreasing (E2 value)”, over-current frequency decreasing starts.
- 2 • Over-current frequency decreasing actions:

- 
- The compressor will decrease frequency at rate of (E2 value)Hz/S. The indoor and outdoor fans run.
  - <sup>3</sup> • Conditions for ending over-current frequency decreasing:
    - When the current drops below “current value for starting the refrigeration current protective prohibition of frequency rising (E2 value)”, over-current under-clocking will be released.

### 7-3.3 Prohibition of frequency increasing of compressor exhausting

- <sup>1</sup> • Conditions for prohibition of frequency rising of compressor discharge:
  - Condition 1: in the case of frequency decreasing of compressor discharge, the discharge temperature of the compressor drops below X4°C
  - Condition 2: in normal operation, the discharge temperature of compressor reaches X5°C
  - If either of the above two conditions is met, prohibition of frequency rising of compressor discharge begins.
- <sup>2</sup> • Actions relates to prohibition of frequency rising of compressor discharge:
  - The frequency of compressor maintains at the current level, which may decrease as the case requires while cannot rise. The indoor and outdoor fans run.
- <sup>3</sup> • Condition for ending prohibition of frequency rising of compressor discharge:
  - If the temperature of compressor discharge drops below X6°C, prohibition of frequency rising of compressor discharge will be released.

### 7-3.4 Prohibition of frequency for anti-overload of outdoor coiled pipe

- <sup>1</sup> • Condition for anti-overload prohibition of frequency of outdoor coiled pipe
  - In the case of anti-overload frequency decreasing of outdoor coiled pipe, anti-overload prohibition of frequency of the unit begins when the temperature of outdoor coiled pipe drops below “the anti-overload frequency decreasing temperature of outdoor coiled pipe”.
- <sup>2</sup> • Actions related to anti-overload prohibition of frequency of outdoor coiled pipe
  - The frequency of compressor maintains at the current level, which may decrease as the case requires while cannot rise. The indoor and outdoor fans run.
- <sup>3</sup> • Condition for ending anti-overload prohibition of frequency of outdoor coiled pipe:
  - If the temperature of outdoor coiled pipe drops below “temperature to release the anti-overload state of outdoor coiled pipe,” anti-overload prohibition of frequency of outdoor coiled pipe will be released.

## 7-4. Troubleshooting Diagnosis for Compressor

### Judging the connecting terminals of inverter compressor:

It is impossible to identify terminals U, V and W of inverter compressor with multi-meter. Just connect the terminals in the same way as the original unit when replacing the compressor. A wrong connection will lead to reverse and loud noise of the compressor.

### Resistance of compressor coil:

- Measure the resistance between any two terminals, which are about a few Ohms, three phases having the same resistance.

## 7-5. Troubleshooting Diagnosis for Electric Filter Board

**Visual examination:** As the circuit is simple, the connection may be checked visually to see whether any loose or poor connection.

**Voltage test:** The voltage at the input end shall be the same as the voltage at the output end.

## 7-6. Troubleshooting Diagnosis for Electric Communication Issues

**Step 1.** Determine whether the connecting cables and tether cables of indoor/outdoor units are correctly wired. If not, change wiring order and test connection.

**Step 2.** Determine whether there is loose connection. Fasten the connection in the case of loose connection and then conduct verification.

**Step 3.** Measure the voltage between SI and N with multi-meter and see whether the voltage fluctuates between 0V and 24V. Please directly replace indoor and outdoor control boards if there are not voltage fluctuations.